

## **Systems Reference Library**

### **IBM 1130 Assembler Language**

This publication contains the information necessary to write programs in the IBM 1130 Assembler language. Included are rules for statement writing, mnemonic codes and descriptions of operands, and descriptions of the instructions used to control the Assembler program.

## PREFACE

This manual describes the IBM 1130 Assembler language and defines the programming rules. It is intended as reference material for the writing of an assembler source program and the accomplishment of the steps required to produce the resulting object program. For those without programming experience or a knowledge of the principles involved, the IBM publication, Introduction to IBM Data Processing Systems (Form F22-6517), is suggested as preliminary reading.

Within this publication, all references to the "Monitor System" apply to Version 1 and Version 2. Where the reference only applies to Version 1, the abbreviation DM1 is used. Where the reference only applies to Version 2, DM2 is used.

The term "loader" as it applies to the 1130 programming systems have the following meanings:

Card/Paper Tape	- Relocating Loader
Disk Monitor 1	- Loader
Disk Monitor 2	- Core Load Builder

For those without experience involving different number systems, i.e., binary and hexadecimal, the publication IBM Student Text: Number Systems (Form C20-1618) is recommended.

The reader should also be familiar with the following: IBM 1130 Functional Characteristics (Form A26-5881) and IBM 1130 Computing System, Input/Output Units (Form A26-5890).

The assembler language is valid for the 1130 Disk Monitor Programming Systems and the 1130 Card/Paper Tape Programming System. The operating procedures for the Monitor Assembler are described in the publications IBM 1130 Disk Monitor System Reference Manual (Form C26-3750), and IBM 1130 Disk Monitor System, Version 2, Programming and Operator's Guide (Form C26-3717).

The operating procedures for the 1130 Card/Paper Tape Assembler are described in the publication IBM 1130 Card/Paper Tape Programming System Operator's Guide (Form C26-3629).

The library subroutines for the 1130 systems are described in the IBM 1130 Subroutines Library manual, (Form C26-5929).

## MACHINE REQUIREMENTS

The minimum machine configuration for assembling programs is as follows:

IBM 1131 Central Processing Unit, Model 1,  
with 4096 words of core storage  
IBM 1442 Card Read Punch, or IBM 1134 Paper  
Tape Reader and IBM 1055 Paper Tape Punch.

### Fifth Edition

This edition is a revision of the previous edition (C26-5927-3) which is now obsolete. Information has been added to distinguish between Version 1 and Version 2 of the 1130 Disk Monitor System.

Significant changes or additions to the specifications contained in this publication will be reported in subsequent revisions or Technical Newsletters.

Requests for copies of IBM publications should be made to your IBM representative or to the IBM branch office serving your locality.

A form is provided at the back of this publication for reader's comments. If the form has been removed, comments may be addressed to IBM Nordic Laboratory, Technical Communications Department, Vesslevägen 3, Lidingö, Sweden.

## CONTENTS

GENERAL DESCRIPTION .....	1	Data Definition Statements .....	19
Introduction .....	1	DC - Define Constant .....	19
Symbolic Language .....	1	DEC - Decimal Data .....	19
Assembler Program .....	1	XFLC - Extended Real Constant .....	21
Subroutines .....	1	EBC - Extended Binary Coded Information .....	21
Features of the Assembler .....	1	Storage Allocation Statements .....	22
SYMBOLIC LANGUAGE .....	3	BSS - Block Started by Symbol .....	22
Mnemonic Concept .....	3	BES - Block Ended by Symbol .....	22
Format of Statements .....	3	Symbol Definition Statement .....	22
Statement Fields .....	3	EQU - Equate Symbol .....	22
Statement Writing .....	7	Linking Statements .....	23
Character Set .....	7	ENT - Define Subroutine Entry Point .....	23
Symbols .....	7	ISS - Define Interrupt Service Entry Point .....	23
Location Assignment Counter .....	8	ILS - Define Interrupt Level Subroutine .....	24
Relative Addressing .....	8	CALL - Call Direct Reference Subroutine .....	24
Self-Defining Values .....	8	LIBF - Call TV (Transfer Vector) Reference Subroutine .....	25
Decimal Values .....	9	MONITOR ASSEMBLER STATEMENTS .....	26
Hexadecimal Values .....	9	Disk Data Organization Statements .....	26
Character Values .....	9	DSA - Define Sector Address .....	26
Expressions .....	9	FILE - Define Disk File (DM2 only) .....	27
Elements .....	9	Data Definition Statements .....	28
Terms .....	10	DMES - Define Message (DM2 only) .....	28
Operators .....	10	DN - Define Name (DM2 only) .....	29
Evaluation of Expressions .....	10	Linking Statements .....	30
Types of Expressions .....	10	LINK - Load Link Program .....	30
MACHINE-INSTRUCTION STATEMENTS .....	13	EXIT - Return to Supervisor .....	30
Mnemonics .....	13	DUMP - Dump and Terminate Execution (DM2 only) .....	30
Condition-Testing Instructions (BSC, BOSC, BSI) .....	13	PDMP - Dump and Continue Execution (DM2 only) .....	31
Additional Monitor System Mnemonics (DM2 only) .....	15	List Control Statements .....	31
ASSEMBLER INSTRUCTIONS .....	17	HDNG - Heading .....	31
Program Control Statements .....	17	LIST - List Segments of Program (DM2 only) .....	31
ABS - Assemble Absolute .....	17	SPAC - Space Listing (DM2 only) .....	32
LIBR - Transfer Vector Subroutine .....	18	EJCT - Start New Page (DM2 only) .....	32
SPR - Standard Precision, EPR - Extended Precision .....	18	APPENDIX A. CHARACTER CODE SUMMARY .....	33
ORG - Define Origin .....	18	APPENDIX B. HEXADECIMAL-DECIMAL CONVERSION	
END - End of Source Program .....	19	CHART .....	38
		APPENDIX C. ASSEMBLER MNEMONICS AND ERROR	
		CODES FOR 2250 ORDERS .....	39, 1
		INDEX .....	40



## INTRODUCTION

The IBM 1130 Assembler language replaces binary instruction codes with mnemonic symbols and uses labels for other fields of an instruction. Other features, such as pseudo-operations, expand the programming facilities of machine language. Thus, the programmer has available, through an assembler language, all the flexibility and versatility of machine language, plus facilities that greatly reduce machine language programming effort.

### Symbolic Language

Symbolic language is the notation used by the programmer to write (code) the program. A program written in symbolic language is called a source program. It consists of systematically arranged mnemonic operation codes, special characters, addresses, and data, which symbolically describe the problem to be solved by the computer.

The use of symbolic language:

- Makes a program independent of absolute core locations, thus allowing programs and subroutines to be relocated and combined as desired.
- Allows subroutines that can be written independently and that cause no loss of efficiency in the final program.
- Permits instructions to be added to or deleted from a source program without the user having to reassign storage addresses.

### Assembler Program

The assembler program converts (assembles) a source program into a machine-language program. The conversion usually is one for one — that is, the assembler produces one machine-language instruction for each symbolic-language instruction.

The 1130 Disk Monitor Assembler is a two-pass assembler. The source program is read into core from the principal input device and written on the disk for use in pass 2. During the first pass the symbol table is generated. During the second pass the object

program is created in the system Working Storage and the listing, if requested, is produced.

The IBM 1130 Card/Paper Tape Assembler is a two-pass program. It is loaded into the computer and is followed by the first pass of the source program. During the first pass, the source statements are read and a symbol table is generated. During the second pass, the source program is read again and the object program and/or error indications are punched into the first 20 columns of each source card. If paper tape is used, the second pass results in the punching of a new tape that contains both source statements and corresponding object information. Both card and tape object programs must be compressed (via a Compressor Program supplied with the assembler) into a relocatable binary deck (or tape) before they can be loaded into core storage for execution. The output from the second pass is called the list deck (or tape) and can be used to obtain a program listing of source statements and corresponding object statements.

### Subroutines

A library of input/output, arithmetic, and functional subroutines is available for use with the IBM 1130 Assembler.

The user can incorporate any subroutine into his program by simply writing a call statement (CALL or LIBF, whichever is required), referring to the subroutine name. The assembler generates the linkage necessary to provide a path to the subroutine and a return path to the user's program. The ability to use subroutines simplifies programming and reduces the time required to write a program.

A description of available subroutines is contained in the system subroutine library manual.

## FEATURES OF THE ASSEMBLER

The significant features of the IBM 1130 Assembler are summarized below. More detailed explanations are given later in this manual.

Mnemonic Operation Codes. Mnemonic operation codes are used for all machine instructions instead

of the more cumbersome internal binary operation codes of the machine. For example, the Subtract instruction can be represented by the mnemonic, S, instead of the machine operation code, 10010.

Symbolic References to Storage Addresses. Instructions, data areas, and other program elements can be referred to by symbolic names or actual machine addresses and designations.

Renaming Symbols. A symbolic name can be equated to another symbol, so that both refer to the same storage location. This makes it possible for the same program item to be referred to by different names in different parts of the program.

Automatic Storage Assignment. The assembler assigns consecutive addresses to program elements as it encounters them. After processing each element, the assembler increments a counter by the number of words assigned to that element. This counter indicates the storage location available to the next element.

Relocatable Programs. The assembler can produce object programs in a relocatable format; that is, a format that enables programs to be loaded and executed at storage locations different from those assigned when the programs were assembled.

Convenient Data Representation. Constants can be specified as decimal digits, alphabetic characters, hexadecimal digits, and storage addresses. Conversion of the data into the appropriate machine format of the 1130 System is performed by the Assembler. Data can be in a form suitable for use in decimal integer, fixed-point, or real arithmetic operations.

Program Listings. For every assembly, the user can obtain a program listing. This listing can be produced either off-line (Card/Paper Tape Assembler) or on-line during the assembly process (Disk Monitor Assembler).

Error Checking. Source programs are examined by the Assembler for errors arising from incorrect use of the language. Where an error is detected, a coded warning message appears in the program listing.

## MNEMONIC CONCEPT

Symbolic programming may be defined as a method whereby names and symbols are used to write a program. The symbolic language includes a standard set of mnemonic operation codes. Mnemonic operation codes are easier to remember than machine language codes because they are usually abbreviations for actual instruction descriptions. For example:

<u>Description</u>	<u>Mnemonic</u>
Add	A
Execute I/O	XIO

Each IBM 1130 machine instruction has a corresponding mnemonic operation code. In addition, there are some mnemonic codes that assign storage and others that allow the user to exercise control over the assembly process.

## FORMAT OF STATEMENTS

A source program consists of a sequence of statements. These statements can be written on a standard coding form (X26-5994) provided by IBM. The information on each line of the form (Figure 1) is punched into one card or paper tape record or entered from the keyboard. The first position on the form (21) corresponds to card column 21 or to the first character of the paper tape/keyboard record. Space is provided at the top of the coding form to identify the program; however, none of this information is punched into the statement cards. The first 20 columns of an assembler source card must be blank.

NOTE: Keyboard input is acceptable only with the Monitor 2 Programming System.

### Statement Fields

An assembler statement is composed of one to seven fields: label field, operation field, format field, tag field, operand field, comments field, and identification sequence field.

### Label Field (Columns 21-25)

The label field represents the machine location of either data or instructions. The field may be left blank, may contain an asterisk in column 21, or may be filled with a symbolic address, left-justified in the field. Only data or instructions that are referred to elsewhere in the program need a label, although a label that is not further referred to is not an error.


A label can consist of up to five alphameric characters, beginning at the leftmost position of the label field. A label is always a symbol and must therefore conform to the rules for symbols (see Symbols). The example below shows the symbol ALPHA used as a label.

Label					Operation				F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45	50											
ALPHA		STO					An Expression													

If the label field is left blank, it is ignored by the Assembler and has no effect on the assembled program. If column 21 contains an asterisk (\*), the entire statement is treated as comments and appears only in the listing. If the field contains a symbolic name (label), and the statement represents a standard machine language operation (Add, Store, etc.), the value assigned to the label is the address of the assembled instruction, which is equal to the value of the Location Assignment Counter (see Location Assignment Counter) at the time the statement is encountered by the Assembler. Values assigned to labels of the various assembler instructions are specified in the section entitled Assembler Instructions.

### Operation Field (Columns 27-30)

Each machine instruction and assembler instruction has a unique mnemonic operation code associated with it. When a particular operation is to be represented, its mnemonic code must be punched, left-justified, in columns 27-30 of the source statement record.



Date \_\_\_\_\_

Page No. \_\_\_\_\_ of \_\_\_\_\_

[illegible]



Index (LDX), Load Status (LDS), WAIT, all shift instructions, and all condition testing instructions is never added to the IAR. The effective address of all other short instructions is obtained by adding the displacement to the IAR, if the instructions are not indexed; that is, if column 33 is blank or zero.

The X format suppresses the automatic subtraction of the address counter from the displacement operand value when the instruction is moved. Therefore, the X format should be used for a short instruction which will have an effective address obtained by adding the displacement to the IAR. This requirement is not in conflict with the relocation process, because the process shifts the whole program, including instructions and reference data, to a core storage area different from that for which it was assembled. The relative distances between instructions and data remain the same, and the displacements remain correct.

In a relocatable assembly, the expression specifying an operand modified by the IAR must be relocatable so that the actual displacement is an absolute quantity (see Expressions). If this rule is not followed, a relocation error will be indicated. Also, since displacements must lie in the range  $-128_{10}$  to  $+127_{10}$ , the value of the displacement-specifying expression must not be more than  $127_{10}$  greater, nor more than  $128_{10}$  less than the address of the next location after the instruction in which it appears; otherwise, an addressing error will be indicated. An example illustrating the blank format is shown below:

Assume A = location  $1000_{10}$   
           B = location  $1050_{10}$

The value of the IAR will be  $1001_{10}$  when instruction A is executed. Therefore, the value computed by the assembler for the displacement will be  $49_{10}$ .

Label				Operation				F	T										
21	25	27	30	32	33	35	40	45											
A				L, D						B									
				•															
				•															
				•															
				•															
				•															
				•															
B				D, C						C, O, N, S, T									

In the case of an instruction whose address is not modified by the IAR, the Assembler interprets the expression in the operand field as the desired contents of the displacement field, without modification. In this case, the operand specifying the displacement must be absolute and must be in the range  $-128_{10}$  to  $+127_{10}$ , or relocation and addressing errors result.

X Format. An X in the format field indicates to the Assembler that the related statement is to be assembled as a short instruction. It further indicates that any expression in the operand field is to be interpreted as the desired displacement value.

Consider the example illustrated in Figure 2; the purpose of this instruction sequence is to change the flow of a program by inserting a branch instruction in a location that previously contained a "no operation." If the branch instruction at BRCON were specified as MDX GO (i.e., blank format), the assembler would compute the displacement on the basis of the IAR value of  $1101$ . (The IAR would have a value of  $1101$  if the BRCON instruction were executed where it was assembled.) However, the programmer, knowing the instruction will be executed at location SWTCH, computes the displacement himself and specifies the X format.

L Format. If column 32 contains the character L, it signifies a long (two-word) instruction with direct addressing. Bit 5 (F) of the assembled instruction is set to 1. The operand-field expression, which may be relocatable or absolute, is used to fill the second word (bits 16-31) of the assembled instruction. A second operand may be present, separated from the first operand by a comma (,). This operand may be used in one of two ways:

1. To specify symbolic condition codes for use with BSC, BSI and BOSC instructions.
2. To specify an expression that has a value in the range of  $-128$  to  $+127$  and is not relocatable.

This second operand yields bits to fill bit positions 8-15 of the assembled instruction.

I-Format. If column 32 contains the character I, it signifies an indirectly addressed long instruction. Bit 5 and bit 8 are set to 1. In all other respects an indirect instruction is treated exactly as a long direct instruction. If a displacement operand is specified, its high-order bit (bit 8) will always be a one, causing the displacement to be negative, because this bit is also the indirect flag bit.



statement fields from columns 22-72 may be used for comments. The identification-sequence field (columns 73-80) should not be used for comments.

If it is necessary to continue comments on additional lines, each line must have an asterisk in column 21, as illustrated in Figure 4.

#### Identification-Sequence Field (Columns 73-80)

The identification-sequence field may be used for program identification and statement-sequence numbers. It is limited to columns 73-80. The information in this field normally is punched in every statement card. The Assembler, however, does not check this field.

### STATEMENT WRITING

Symbolic language statements are accepted by the Assembler only if they conform to the rules of syntax presented in this section. Subsequent sections of this publication deal with the format and content of the specific types of assembler statements (machine instructions and assembler instructions). Instructions of both types are formed by using the basic elements described here. Many of the points introduced in this section are covered more extensively in subsequent sections.

#### Character Set

The following characters may be used in statements:

Monocase Alphabetics	A through Z, \$, #, @
Numerics	0 through 9
Special Characters	/*+==& ' " <> ' . , ; ( ) % - ? (blank)

The codes that the assembler accepts for these characters are listed in Appendix A. Appendix A also lists additional codes which may be used in comments statements, as character values, and as alphameric constants. The + and & special characters may be used interchangeably as operators.

#### Symbols

Storage areas, instructions, and other elements may be given symbolic names for the purpose of referring to them in the program. The symbolic name is called a symbol. It can contain up to five characters.

While the first character of a symbol must be alphabetic, the remainder may be alphabetic, numeric, or any combination of the two. No embedded blanks or special characters may be used. Any violation of these rules is detected by the Assembler and indicated as an error in the program listing.

The following are valid symbols:

PUNCH	START	N
A2345	LOOP2	BC\$#@

\$, # and @ are monocase alphabetics, not special characters (see Character Set), and as such can be used in the label field.

The following symbols are invalid, for the reasons noted:

256B	First character is not alphabetic
RECORDAREA2	More than 5 characters
END 1	Contains a blank

If a symbol is to be used as an operand, it must be defined in the program by using it as the label of a statement. Two types of label assignments are allowed. In machine-instruction statements and certain assembler statements, the label is assigned an address equal to the current value of the Location Assignment Counter. In the Equate Symbol statement (see Symbol Definition Statement), the label is assigned the value specified in the operand of the statement.

Symbol Table. For every program assembled, a table of the symbols in that program is created. This is the symbol table; each entry in the table records the value and relocation property of a symbol.

All symbols defined in the program are entered in the symbol table. Symbols that appear in the label field of assembler instructions that do not use labels (for example, ABS, END, ENT) are not placed in the symbol table.

General Restrictions on the Use of Symbols. The following restrictions are imposed on the use of symbols:

- A symbol may appear only once in a program as the label of a statement. If a symbol is used as a label more than once, only the first usage is recognized. Each subsequent usage of the symbol as a label is ignored and, in the card/paper tape system, is noted as an error in the program listing. In addition, any reference to

Label		Operation		F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45	50	55	60	65	70		
*T,H,E	A	S,T,E,R	S	K											
*A,N,A	A	T,E,R,I	K												

Figure 4. Example of Comments Statement

such a symbol is noted as an error.

- The number of symbols that can be defined in a program is restricted by the amount of core storage available to the assembler. The number of symbols allowed is defined in the system operator's manual.

## LOCATION ASSIGNMENT COUNTER

The Assembler maintains a counter to assign sequential storage addresses to program statements. This counter is called the Location Assignment Counter. It always indicates the next available address. As each machine instruction is processed, the counter is incremented by the number of words assigned to that instruction. Certain assembler instructions also cause the Location Assignment Counter to be set or incremented, whereas others do not affect it (see Assembler Instructions).

Location Assignment Counter Overflow. The maximum value of the Location Assignment Counter is 65535, a 16-bit value. If a program being assembled causes the counter to be incremented beyond 65535, the Assembler retains only the rightmost 16 bits in the counter and continues the assembly, checking for any other source program errors. No usable object program is produced. The user can, however, still obtain a listing of the entire source program.

## RELATIVE ADDRESSING

Once an instruction has been named by a symbol in the label field, it is possible for other instructions to refer to that instruction by using the same symbol. Moreover, it is possible to refer to instructions preceding or following the instruction named by indicating their positions relative to that instruction. This procedure is referred to as relative addressing. A relative address is, effectively, a type of expression (see Expressions).

For example, in the sequence

Label		Operation		F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45							
S,T,A,R,T	A														
		S													
		S,T,O		L											
A,L,I,S,T	A			L											
		D													

control can be transferred to the second instruction by either of the following instructions:

Label		Operation		F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45							
		B,S,C		L											
		B,S,C		L											

By using relative addressing, it is also possible to refer to a particular word within a block of reserved storage. For example, the instruction

Label		Operation		F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45							
B,E,T,A		B,S,S													

reserves a block of 50 words, in which BETA is the address assigned to the first word in the block. The address BETA+1 then refers to the second word, BETA+2 to the third word, and BETA+n to the (nth+1) word.

Relative addressing can also be effected by using the current value of the Location Assignment Counter in an operand. In symbolic language this value is denoted by an asterisk (\*). (See The Asterisk Used as an Element.)

## SELF-DEFINING VALUES

A self-defining value is a machine value or a bit configuration.

Self-defining values can be used to specify such program elements as data, masks, addresses, and address increments. The type of representation selected (decimal, hexadecimal, or character) depends on what is being specified.

### Decimal Values

A machine decimal value is an absolute number from 0 to 65535. It is assembled as its binary equivalent. Some examples of decimal, self-defining values are

500	003
17	52324
7230	1

If a number larger than 65535 is specified in address arithmetic, the value is truncated modulo 65536; that is, only the low order 16 bits of the binary value are retained.

### Hexadecimal Values

A hexadecimal value is an unsigned hexadecimal number written as a sequence of digits. The digits must be preceded by a slash (/). The hexadecimal digits represent the 16 possible combinations of four bits.

Each hexadecimal digit is assembled as its four bit value. The hexadecimal digits and their bit patterns are as follows:

0 - 0000	4 - 0100	8 - 1000	C - 1100
1 - 0001	5 - 0101	9 - 1001	D - 1101
2 - 0010	6 - 0110	A - 1010	E - 1110
3 - 0011	7 - 0111	B - 1011	F - 1111

The following are examples of hexadecimal, self-defining values:

/FFFF	
/AB12	
/379B	
/F2	} equivalent
/00F2	

If more than four hexadecimal digits are specified in one sequence, only the four low-order digits are retained by the assembler. If less than four hexadecimal digits are specified, they are entered, right-justified.

A table for converting decimal values to hexadecimal values is provided in Appendix B.

### Character Values

A character value is a single character, preceded by a period. A character value may be a blank, any

combination of punches in a single card column, or a paper tape character that translates into the eight-bit IBM Extended BCD Interchange Code. Appendix A is a table of these combinations, their interchange codes and, where applicable, their printer graphics. A period used as a character value is represented as two periods in sequence, (i.e., ..).

Examples of character values are:

.A  
.1  
.2  
.D  
.(blank)

The same value can frequently be represented by any one of the three types of self-defining values. For example, the decimal value 196 can be expressed in hexadecimal as /C4 and as a character, .D. The selection of a particular type of value is left to the programmer. Decimal values can be used for actual addresses and input/output unit numbers, hexadecimal values for masks, and character values for data.

## EXPRESSIONS

The term "expression" refers to symbols or self-defining values used as operands, either singly or in arithmetic combinations. Expressions are used to specify the various fields of machine instructions. They are also used as the operands of assembler-instruction statements.

An expression has three components: elements, terms, and operators.

### Elements

The smallest component of an expression is an element. An element is either a single symbol or a single self-defining value. The following are valid elements:

TMP  
/1A6  
.B  
A  
\*  
4

### The Asterisk Used As an Element

When used as an element the asterisk is relocatable and stands for the current value of the Location Assignment Counter for the instruction in which it appears (i.e., the rightmost word of the current instruction + 1). Thus, the asterisk as an element can have different values for different instructions.

Label		Operation		F	T		
21	25	27	30	32	33	35	45
		L,D				A,B,C	
S,U,M		A				D,E,F	
		S				D,A,T,A	
		B,S,C	L			S,U,M	+

The last instruction is a conditional branch to location SUM and can be written

Label		Operation		F	T		
21	25	27	30	32	33	35	45
		B,S,C	L			*,-,4,+,	

Be sure the asterisk refers to the proper word when it is used with a long instruction or in an area where long instructions are present. In the previous example, the BSC instruction will become two machine language words after assembly. Therefore, during assembly of the BSC instruction, the Location Assignment Counter contains a value one greater than if the BSC were a short instruction.

### Terms

A term can consist of a single element, two elements separated by an asterisk (which denotes multiplication), or three elements each separated by an asterisk, etc. A term must begin with an element and end with an element, but is not permissible to write two elements in succession. The following are valid terms:

```
TMP * FUNC * TAXY
A * 4
X * Y * 5
6 * 4096
3
```

### Operators

An operator is a character that denotes an arithmetic function. The recognized operators are + or & (plus or ampersand), - (minus), and \* (asterisk), denoting addition, subtraction, and multiplication, respectively. An operator must be used between two terms. Two operators may not be used in succession.

There is no ambiguity between the use of the asterisk as an element and the use of the asterisk as an operator to denote multiplication, because the

position of the asterisk always makes clear what is meant. Thus, \*\*10 means "the value of the Location Assignment Counter multiplied by 10."

### Evaluation of Expressions

From a symbolically written operand, the evaluation procedure derives an integer value that can be used as (1) a displacement value in a short instruction, (2) an address in a long instruction, or (3) an absolute numeric quantity.

An expression is evaluated as follows:

1. Each element is replaced by its numeric value.
2. Each term is evaluated by performing the indicated multiplications from left to right, in the order in which they occur. In multiplication, the low-order 16 bits are retained.
3. The terms are combined from left to right, in the order in which they occur. If the result is negative, it is replaced by its 2's complement.

Grouping of terms, by parentheses or otherwise, is not permitted; however, this restriction can often be circumvented. For example, the product of 25 times the quantity B-C can be expressed as

25 \* B - 25 \* C

### Types of Expressions

In addition to evaluating expressions, the Assembler must decide whether the expression is absolute or relocatable. Without this information the Assembler would be unable to assign the proper relocation indicator bits for use during loading.

#### Rules for Determining the Type of Expression

The rules by which the expression type is determined are:

- A symbol that is defined by means of the Location Assignment Counter is a relocatable element.
- Decimal and hexadecimal integers and character values are absolute elements.
- A relocatable element alone is a relocatable expression.
- A relocatable element, plus or minus an absolute element, is a relocatable expression.

- The difference of two relocatable elements is an absolute expression.
- A symbol that has been equated to an expression (by means of the EQU assembler instruction) assumes the same relocation property as that expression.

These rules are clarified by the following example:

Assume that a programmer wishes to incorporate a table into a relocatable program, and he knows that he may later wish to add or delete items without changing program references to the table. The first step is to assign symbols to the first (lowest-addressed) word in the table and to the location immediately after the last (highest-addressed) word of the table. These symbols could be BGTBL and ENTBL, respectively. Regardless of the number of items in the table or of the number of later additions or deletions, the number of words in the table is always equivalent to the value of the expression ENTBL-BGTBL. This illustrates the rule that the difference of two relocatable elements is an absolute expression.

Expanding this example, assume the programmer wishes to use a second table the same length as the first. The first (lowest addressed) word of the second table can be indicated by the symbol STBL. Then, the location following the last (highest-addressed) word of the second table can be indicated by the expression

$$STBL + ENTBL - BGTBL$$

This address is subject to relocation; hence, the expression is relocatable, following the rule that a relocatable element plus or minus an absolute element is a relocatable expression.

#### Procedure for Determining the Type of Expression

The following paragraphs describe the procedure for determining expression type (absolute or relocatable):

- Discard any term that contains only absolute elements.
- Examine each term of the expression. If any term contains more than one relocatable element, the expression will yield a relocation error.

- Replace each relocatable element by the symbol  $r$ , and replace each absolute element by its value. This yields a new expression which involves only numbers and the symbol  $r$ .
- Rewrite the expression in simplest form by evaluating it according to the address arithmetic rules given above in the section, Evaluation of Expressions.

If the result is an integer, the operand is absolute. If the result is  $r$ , the expression is relocatable. If the result contains  $r$  to any power other than one, or contains  $r$  with a coefficient other than one, the operand does not have a well-defined relocation property and will yield a relocation error. The following examples illustrate this procedure.

NOTE: When the terms absolute symbol and relocatable symbol are used in text, they mean symbols that refer to addresses.

Example 1: Consider the expression,

$$4+3*TRANS-2*FUNC+COUNT$$

where TRANS and FUNC are relocatable symbols, and COUNT is an absolute symbol. Discarding the terms involving only absolute elements leaves

$$3*TRANS-2*FUNC$$

This does not contain any illegal terms. Replacing each symbol by the letter  $r$  results in

$$3*r-2*r$$

Evaluating this produces  $r$ ; therefore, the expression is relocatable.

Example 2: Consider the expression,

$$2*3*TRANS-FUNC$$

This reduces to

$$2*3*r-r$$

or

$$5r$$

This is neither  $r$  nor a number; therefore, the expression will cause a relocation error.

Example 3: Consider the expression,

$$A*2*R-A*A*R+5$$

where  $A$  is an absolute symbol, and  $R$  is a relocatable symbol. The expression is absolute if the value of  $A$  is zero or two and relocatable if the value of  $A$  is 1. If the value of  $A$  is anything else, a relocation error will result.

In the following examples,  $A$ ,  $B$ ,  $C$ , and  $D$  are relocatable symbols, and  $J$ ,  $K$ ,  $L$ ,  $M$ , and  $N$  are absolute symbols.

Relocatable expressions:

$A$	$1*A$
$A+J$	$250*A-249*B$
$A+B+C-D-*$	$100*A+50*B-75*C-74*D$

Absolute expressions:

$12345$	$0*A$
$A-B+C-D+5$	$500*A-400*B-100*C$

## Relocation Errors

If a source program contains an expression having in it one or more of the following, that expression is flagged as a relocation error.

- The negative (complement) of a relocatable element
- An absolute element minus a relocatable element
- The sum of two relocatable elements

In the following examples,  $A$ ,  $B$ ,  $C$ , and  $D$  are relocatable symbols, and  $J$ ,  $K$ ,  $L$ ,  $M$ , and  $N$  are absolute symbols.

$A+B$	$(+2r)$	$A*B$	$(r^2)$
$-A$	$(-1r)$	$2*A$	$(2r)$
$15-*$	$(-1r)$	$5*A-6*A$	$(-1r)$
$A+J+M+N+B-C+D+L(+2r)$			

NOTE: In an absolute assembly headed by an ABS statement (described later), all symbols and asterisk values are defined as being absolute; therefore, no relocation errors are possible.



All machine instructions can be represented symbolically as assembler language statements. There are two basic formats: short and long. However, within each basic format, further variations are possible.

The symbolic format of a machine instruction parallels, but does not duplicate, its actual format. A mnemonic operation code is written in the operation field, and one or more operands are written in the operand field. Comments can be appended to a machine-instruction statement as previously explained.

Any machine-instruction statement can be named by a symbol, which other assembler statements can use as an operand. The value of the symbol is the address of the leftmost word assigned to the assembled instruction.

## MNEMONICS

A list of all IBM 1130 machine language instructions and their associated mnemonics, including those mnemonics available for the monitor system only, is given in Table 1.

### Condition-Testing Instructions (BSC, BOSC, BSI)

The machine instructions Branch or Skip on Condition (BSC), Branch Out or Skip on Condition (BOSC), and the long form of Branch and Store Instruction counter (BSI) use bits 10-15 of the displacement to test any combination of six conditions associated with the accumulator. When coding these instructions, the user does not use an expression to specify the displacement field, but, instead, writes a series of unique characters, each of which represents one bit of the condition-testing mask. These character symbols may be written in any combination; the bits they represent are combined by the assembler in a logical OR fashion. The symbols and their representations are:

Unique Character	Condition	Description	Bit Position Set to 1
O (Alpha)	Overflow	Skip or do not branch if Overflow indicator <u>off</u>	15
C	Carry	Skip or do not branch if Carry indicator <u>off</u>	14
E	Even	Skip or do not branch if bit 15 of Acc =0	13
+ or &	Plus	Skip or do not branch if bit 0 of the Acc =0, but not all bits of Acc =0	12
-	Minus	Skip or do not branch if bit 0 of Acc =1	11
Z	Zero	Skip or do not branch if all bits of Acc =0	10

#### Examples:

Operation	F	T		
27 30 32 33 35 40				
B,S,C,			+	Skip on plus condition
B,S,C,			+,-	Skip on non-zero (plus or minus)
B,S,C,			-	Skip on non-plus (zero or minus)
B,S,C,			C	Skip if Carry indicator off
B,S,C,	L		E,X,I,T,+,-	Branch to EXIT if not plus (zero or minus)
B,S,C,	L		E,X,I,T,-	Branch to EXIT if zero (not plus or minus)
B,S,C,	L		E,X,I,T	Unconditional Branch to EXIT
B,S,C,	L	I	0,-,+	Branch to the contents of XR1 if minus (not zero or plus)
B,S,I,	L		S,U,B,R,0	Branch and Store instruction counter to SUBR if Overflow is on


Table 1. Machine Instruction Mnemonics

Mnemonic	OP Code (Hexadecimal Representation) <sup>1</sup>	Instruction
<u>Load and Store</u>		
LD	C00	Load Accumulator
LDD	C80	Load Double
LDX	600	Load Index
LDS*	200	Load Status
STO	D00	Store Accumulator
STD	D80	Store Double
STX	680	Store Index
STS	280	Store Status
<u>Arithmetic</u>		
A	800	Add
AD	880	Add Double
S	900	Subtract
SD	980	Subtract Double
M	A00	Multiply
D	A80	Divide
AND	E00	And
OR	E80	Or
EOR	F00	Exclusive Or
MDM	+ 5 740	Modify Memory
<u>Branch</u>		
B	+4 700 or 4C0	Branch
BSI	400	Branch and Store Instruction Counter
BSC	480	Branch or Skip Conditionally
BP	t6 4C30	Branch Accumulator Positive
BNP	t6 4C03	Branch Accumulator Not Positive
BN	t6 4C28	Branch Accumulator Negative
BNN	t6 4C10	Branch Accumulator Not Negative
BZ	t6 4C18	Branch Accumulator Zero
BNZ	t6 4C20	Branch Accumulator Not Zero
BC	t6 4C02	Branch on Carry
BO	t6 4C01	Branch on Overflow
BOD	t6 4C04	Branch Accumulator Odd
SKP*	+ 480	Skip on Condition(s)
BOSC	2 484	Branch Out or Skip Conditionally
MDX	700	Modify Index and Skip
<u>Shift</u>		
SLA*	100	Shift Left Accumulator
SLT*	108	Shift Left Accumulator and Extension
SLC*	10C	Shift Left and Count Accumulator and Extension
SLCA*	104	Shift Left and Count Accumulator
SRA*	180	Shift Right Accumulator
SRT*	188	Shift Right Accumulator and Extension
RTE*	18C	Rotate Right
XCH*	+3 18D	Exchange Accumulator and Extension
<u>Input/Output</u>		
XIO	080	Execute I/O
<u>Miscellaneous<sup>3</sup></u>		
NOP*	100	No Operation
WAIT*	300	Wait

\*Valid in short format only

†Not included in card/paper tape Assembler or DM1 Assembler.

1. The hexadecimal representation of the machine operation code is derived from the instruction format in the manner shown below. Bits 6 and 7 are assumed to be zeros because they do not enter into the makeup of any operation codes.
2. Same as BSC with Bit 9 set to one.
3. An operand should not be specified.
4. When branch is short (Blank or X format), this operation code is assembled as an MDX (700). If the branch is long (L or I format), this operation code is assembled as a BSC with Bit 5 set to one (4C0).
5. This instruction is automatically assembled as a long instruction (L is not required in the format field). Note that an attempt to use indirect addressing will result in a syntax error. Indexing is not permitted with this extended operation code.
6. Extended conditional branch operation codes are assembled automatically as long instructions. (L is not required in the format field). Note that the proper condition code bits are preset, and further condition bits may not be specified following the operand.

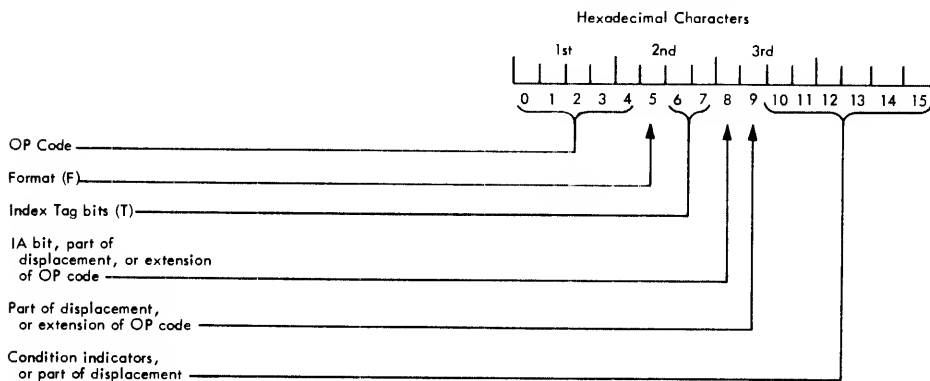

## ADDITIONAL MONITOR SYSTEM MNEMONICS (DM2)

Several new mnemonic operation codes which are equivalent to a Branch or Skip on Condition (BSC) may be used with the DM2 System. The operation code to be used for a specific job depends on the format and condition code required.

A new mnemonic MDM has been introduced that may be used in place of an unindexed MDX long. XCH may be used in place of RTE 16.

Examples of the additional DM2 System mnemonics are shown in Table 2. The mnemonics are listed below.

Skip on Condition (SKP). The condition codes (+, -, Z, E, O, and C) are specified as with a short BSC instruction. This instruction must not be indexed.

Branch Unconditionally (B). If the Format field contains an L or I, the BSC operation code is used with bit 5 set to one. Condition codes are not allowed after the address expression in the Operand field. If the Format field is left blank or contains an X, the MDX operation code is used, and the expression in the Operand field is used to form the displacement.

Branch Accumulator Positive (BP). Condition codes for accumulator zero (Z) and accumulator negative (-) are set to one.

Branch Accumulator Not Positive (BNP). Condition code for accumulator positive (+) is set to one.

Branch Accumulator Negative (BN). Condition codes for accumulator zero (Z) and accumulator positive (+) are set to one.

Branch Accumulator Not Negative (BNN). Condition code for accumulator negative (-) is set to one.

Branch Accumulator Zero (BZ). Condition codes for accumulator positive (+) and accumulator negative (-) are set to one.

Branch Accumulator Not Zero (BNZ). Condition code for accumulator zero (Z) is set to one.

Branch on Carry (BC). Condition code for Carry indicator off (C) is set to one.

Branch on Overflow (BO). Condition code for Overflow indicator off (O) is set to one.

Branch Accumulator Odd (BOD). Condition code for accumulator even (E) is set to one.

NOTE: Condition codes may not be used with any of the above instructions, except SKP, since the condition code is implicit in the extended mnemonic. The conditional branch instructions (all except SKP and B) are always assembled as long instructions; thus, the Format field need not contain an L, although the instruction is not classed as an error if L is specified. Indirect addressing may be specified.

Modify Memory (MDM). Contents of the location specified by the first operand is incremented or decremented by the value of the second operand. The second operand must be in the range -128 to +127.

NOTE: This instruction is always assembled as a long instruction; thus, the Format field need not contain an L, although the instruction is not classed as an error if L is specified. Indexing and indirect addressing must not be specified. If the operand becomes zero or changes sign, the next word in the program will be skipped.

Exchange Accumulator and Extension (XCH). Exchange is identical to a RTE of 16. No operand is specified with this instruction.

Table 2. Examples of New (Extended) Machine Instruction Mnemonics (DM2 only)

New Instruction Statements						Equivalent Statements						Operations Performed					
27	30	32	33	35	40	27	30	32	33	35	40						
SKP				+		BSC				+					Skip if accumulator is positive		
SKP				+ -		BSC				+ -					Skip if accumulator is non-zero		
SKP				Z		BSC				Z					Skip if accumulator is zero		
SKP				O		BSC				O					Skip if Overflow indicator is off		
SKP				C		BSC				C					Skip if Carry indicator is off		
SKP				+ - C		BSC				+ - C					Skip if accumulator is non-zero or if Carry indicator is off		
B				EXIT		HDX				EXIT					Branch unconditionally to EXIT, where EXIT must be within normal displacement range.		
B	L			ALPH		BSC	L			ALPH					Branch unconditionally to ALPH		
BZ				BETA		BSC	L			BETA, + -					Branch to BETA if accumulator is zero		
BN				BETA		BSC	L			BETA, Z +					Branch to BETA if accumulator is negative		
BNZ	I			BETA		BSC	I			BETA, Z					Branch indirectly to BETA (i.e., the address specified by contents of BETA) if accumulator is non-zero		
BN				RTNA		BSC	L			RTNA, Z +					Branch to RTNA if accumulator is negative		
BNN				RTNB		BSC	L			RTNB, -					Branch to RTNB if accumulator is non-negative (zero or positive)		
BP				SUB@		BSC	L			SUB@, Z -					Branch to SUB@ if accumulator is positive		
BP	I			SUB\$		BSC	I			SUB\$, Z -					Branch indirectly to SUB\$ (i.e., the address specified by the contents of SUB\$) if accumulator is positive		
BNP				SUB#		BSC	L			SUB#, + -					Branch to SUB# if accumulator is non-positive (zero or negative)		
BC				ENTR+1		BSC	L			ENTR+1, C					Branch to ENTR+1 if Carry indicator is on		
BC	I1					BSC	I1			A, C					Branch indirectly to address specified by contents of index register 1 if Carry indicator is on		
BO	2			5		BSC	L2			5, O					Branch to address specified by contents of index register 2 plus 5 if Overflow indicator is on		
BOD				\$AFE		BSC	L			\$AFE, E					Branch to \$AFE if accumulator is odd		
MDM				SAVA, +5		HDX	L			SAVA, +5					Increment contents of core location SAVA by 5		
MDM				1D6A, 100		HDX	L			1D6A, 100					Increment contents of core location 1D6A by 100 decimal		
MDM				A, -12		HDX	L			A, -12					Decrement contents of core location A by 12		
XCH						RTE				16					Exchange the accumulator and extension (rotate right 16)		

Just as machine instructions are requests to the computer to perform a sequence of operations during program execution, assembler instructions are requests to the Assembler to perform certain operations during the assembly. In contrast to machine-instruction statements, assembler-instruction statements do not always cause machine instructions to be included in the assembled program. Some, such as BSS and BES, generate no instructions but do cause storage areas to be set aside for constants and other data. Others (e.g., EQU) are effective only during the assembly; they may or may not generate something in the assembled program. If nothing is generated, the Location Assignment Counter is not affected.

The following is a list of all assembler statements permitted by the IBM 1130 Card/Paper Tape Assembler. These statements are also valid for the Monitor Assembler. Additional statements are provided for the Monitor Assembler and are listed in the section Monitor Assembler Statements.

#### Program Control

- ABS - Absolute Assembly
- LIBR - Transfer Vector Subroutine
- SPR - Standard Precision
- EPR - Extended Precision
- ORG - Define Origin
- END - End of Source Program

#### Data Definition

- DC - Define Constant
- DEC - Decimal Data
- XFLC - Extended Floating Constant
- EBC - Extended Binary Coded Information

#### Storage Allocation

- BSS - Block Started by Symbol
- BES - Block Ended by Symbol

#### Symbol Definition

- EQU - Equate Symbol

#### Program Linking

- ENT - Define Subroutine Entry Point
- ISS - Define Interrupt Service Entry Point
- ILS - Define Interrupt Level Subroutine
- CALL - Call Subroutine (2-word call)
- LIBF - Call Subroutine (1-word call)

## PROGRAM CONTROL STATEMENTS

Program control statements are used to set the Location Assignment Counter to a specific value, to define the end of a source program, or to specify whether a particular program is to be assembled as absolute or relocatable. None of these assembler statements generate machine-language instructions or constants in the object program.

## ABS — Assemble Absolute

An ABS statement is used to specify that a main program is to be assembled as an absolute program. An absolute program is one in which the core locations used at execute time are the same as those specified by the programmer in the source program. The ABS statement is punched as shown below and is then used as the first statement of a source program.

Label				Operation				F	T																
21		25		27		30		32	33	35															

If the first (non-comment) statement of a source program is not an ABS statement, the program will be assembled as relocatable. In an absolute assembly headed by an ABS statement, all symbols and asterisk values are defined as absolute quantities; therefore, no relocation errors are possible. The significance of relocatable and absolute assemblies is explained in the following paragraphs.

## Relocatable Assembly

Some programs assembled by the IBM 1130 Assembler are absolute; that is, the locations of assembled instructions are known during the assembly and the location on the listing is the actual location where a particular word is loaded. However, subroutines used by an absolute program must be in such a form that they may be loaded at various locations; otherwise, it would be necessary for the user to reassemble the subroutines each time he assembled a main program that required them. Therefore, all subroutines must be and main programs may be assembled relocatable.

Every relocatable program or subroutine produced by the IBM 1130 Assembler is assembled as though it begins at location zero. Since a job to be executed may contain several subroutines, it is obvious that they cannot all be loaded into locations starting with location zero. In fact, no relocatable program is ever loaded at location zero; instead, each program is relocated. The relocatable main program is loaded into the first available location. Subroutines are then loaded into successively higher locations of core storage, each beginning with the

18

address specified by the current address of the Location Assignment Counter plus 50.

### END — End of Source Program

An END statement is the last statement of a source program; it indicates to the assembler that all statements of the source program have been processed. An END statement is also used to define the execution address of the main program. To do this, the END statement requires an operand that represents the starting address of the program. At the completion of loading, execution begins at the address specified by the operand. For subroutines, all entry points are specified by ENT statements (described later); therefore, the operand of the END statement for a subroutine is blank.

The following statements illustrate both types of END statements.

Label	Operation	F	T	Operands
21	25	27	30	32 33 35 40 45 50
	END			END OF PROGRAM
	END			GO BRANCH TO GO

### DATA DEFINITION STATEMENTS

Data Definition statements are used to enter data constants into storage. The statements can be named by symbols so that other program statements can refer to the fields generated. Any type of data definition statement can be used in standard or extended precision program.

### DC — Define Constant

The Define Constant statement is for generating constant data in main storage. Data can be specified as characters, hexadecimal numbers, decimal numbers, storage addresses, or any valid expression. One 16-bit word is generated for each DC statement. The format of this statement is shown below:

Label	Operation	F	T	Operands
21	25	27	30	32 33 35 40 45
LABEL	DC			AN EXPRESSION

If a label is used, the address assigned to it is the location of the generated data word and is equal to the current value of the Location Assignment Counter. Some examples of DC statements follow:

Label	Operation	F	T	Operands
21	25	27	30	32 33 35 40 45 50
H,EX	DC			/F,F,F,H,EX,C,O,N,S,T
DEC	DC			-3,8,5,DEC,INT,GER
ALPHA	DC			B,C,H,A,R,C,O,N,S,T
ADDS	DC			ALPHA+5,ADDR,C,O,N

### DEC — Decimal Data

The Decimal Data statement is used to enter binary data, expressed in decimal form, into a program. One DEC statement generates two 16-bit words of binary information. The format of the DEC statement is as follows:

Label	Operation	F	T	Operands & Remarks
21	25	27	30	32 33 35 40 45 50
LABEL	DEC			Decimal Data Item

If a label is used, its value is equal to the current value of the Location Assignment Counter if the current value is even; if the current value is odd, the label will be equal to the current value plus one. The label is assigned to the leftmost word of the generated constant. The types of data permitted in the operand field are described in the paragraphs entitled Decimal Data Items. An example of a DEC statement follows:

Label	Operation	F	T	Operands
21	25	27	30	32 33 35 40 45
DAT A	DEC			7,9

If the value of the Location Assignment Counter is 1000 when the DEC statement is encountered, the two words in storage look like this:

Location	Contents in Hexadecimal Form
01000	0000
01001	0013

### Decimal Data Items

A decimal data item is used to specify, in decimal form, two or three words of data to be converted into binary form. Decimal data items are used in the

operand field of DEC assembler statements. Three types of decimal-data items are permitted: decimal integers, real numbers, and fixed-point numbers. A real decimal-data item can also be used as the operand of an XFLC statement that generates a 3-word constant.

Decimal Integers. A decimal integer is composed of a series of numeric digits with or without a preceding plus or minus sign. The allowable range of decimal integers is  $-(2^{31}-1)$  to  $2^{31}-1$ .

#### Examples

<u>Decimal Integer</u>	<u>Stored As</u>
50	00000032 <sub>16</sub>
1535	000005FF <sub>16</sub>
-3729	FFFFF16F <sub>16</sub> (2's complement)

Real Numbers. A real number has two components: a mantissa and an exponent.

- Mantissa — The mantissa is a signed or unsigned decimal number, which can be written with or without a decimal point. The decimal point can appear at the beginning, at the end, or within the decimal number. If the exponent (see below) is present, the decimal point can be omitted, in which case it is assumed to be located at the right-hand end of the decimal number.
- Exponent — The exponent consists of the letter E, followed by a signed or unsigned decimal integer. The exponent part can be omitted if the mantissa contains a decimal point. If used, it must follow the mantissa.

A real number is converted to a normalized, real binary number. The exponent part, if present, specifies a power of ten by which the mantissa is multiplied during conversion. For example, all of the following real numbers are equivalent and will be converted to the same real binary number.

4.500  
45.00E-1  
4500E-3  
.4500E1

In standard precision, the above real numbers are converted and stored in two consecutive storage locations as follows:

<u>Word 1</u>	<u>Word 2</u>
4800	0083

The DEC assembler instruction stores real numbers in the standard precision real number format described in the system subroutine library manual.

Fixed Point Numbers. A fixed-point number can have up to three components: a mantissa, an exponent, and a binary-point identifier.

- Mantissa — The mantissa is the same as described for real numbers.
- Exponent — The exponent is the same as described for real numbers.
- Binary-Point Identifier — This identifier consists of the letter B, followed by a signed or unsigned decimal integer. The binary-point identifier must be present in a fixed-point number and must come after the mantissa. If the number has an exponent, the binary point identifier may precede or follow the exponent.

A fixed-point number is converted to a fixed-point binary number that contains an understood binary point. The purpose of the binary-point identifier of the number is to specify the location of this understood binary point within the word. The number that follows the letter B specifies the number of binary places in the word to the left of the binary point (that is, the number of integral places in the word). The sign bit is not counted. Thus, a binary-point identifier of zero specifies a 31-bit binary fraction. B2 specifies two integral places and 29 fractional places. B31 specifies a binary integer. B-2 specifies a binary point located two places to the left of the leftmost bit of the word; that is, the word would contain the low-order 31 bits of binary fraction. As with real numbers, the exponent, if present, specifies a power of ten by which the mantissa is multiplied during conversion.

A fixed-point number preceded by a minus sign is stored in 2's complement form.

The following fixed-point numbers all specify the same configuration of bits, but not all of them specify the same location for the understood binary point:

22.5B5  
11.25B4  
1125B4E-2



1125E-2B4  
9B7E1

All of the above fixed-point numbers are converted to the same binary configuration, whose hexadecimal representation is:

Word 1	Word 2
5A00	0000

### XFLC — Extended Real Constant

The XFLC assembler instruction is used to introduce into a program an extended precision real constant, expressed in three consecutive data words. When assembled, this instruction produces a format identical to the extended range real format described in the system subroutine library manual.

The format of the XFLC instruction is shown below:

Label	Operation	F	T	Operands & Remarks
21	25	27	30	32 33 35 40 45 50
LABEL	XFLC			REAL NUMBER

The label is optional; if it is used, it is assigned to the location of the leftmost word generated.

Some examples of the XFLC instruction are shown below:

Label	Operation	F	T	Operands & Remarks
21	25	27	30	32 33 35 40 45 50
	XFLC			0.53125
REAL	XFLC			-0.53125
	XFLC			5.12E2

The data (in hexadecimal form) generated by each of these examples is

1.	Word 1	Word 2	Word 3
	0080	4400	0000
2.	Word 1	Word 2	Word 3
	0080	BC00	0000
3.	Word 1	Word 2	Word 3
	008A	4000	0000

### EBC — Extended Binary Coded Information

The EBC statement is used to generate data words, each consisting of two 8-bit characters in the Extended BCD Interchange Code (see Appendix A). Up to 18 sixteen-bit words can be generated with one EBC statement. The format of the statement is shown below:

Label	Operation	F	T	
21	25	27	30	32 33 35 40 45
LABEL	EBC			ALPHA DATA

If a label is present, it is assigned to the location of the leftmost word generated. The operand field contains the alphameric data to be represented in storage. This data must begin and end with a period. The data can be any valid character in the Extended BCD Interchange Code, including the period.

### Examples

Label	Operation	F	T	
21	25	27	30	32 33 35 40 45
CONST	EBC			ERROR
ALPHA	EBC			CONSTANT

The first example generates three words of data, with the location of the label CONST assigned to the leftmost location of the first word generated.

	Word 1	Word 2	Word 3
	C5D9	D9D6	D940

CONST — ↑

Note that if the constant has an odd number of characters, as in the above example, the last word of data ends with the 8-bit equivalent of blank.

The second example generates four words of data:

Word 1	Word 2	Word 3	Word 4
C3D6	D5E2	E3C1	D5E3

NOTE: A period may not appear in the remarks field of an EBC instruction.

## STORAGE ALLOCATION STATEMENTS

Storage allocation statements are used to reserve blocks of storage for data or work areas. Two such statements are available with the IBM 1130 Assembler: Block Started by Symbol and Block Ended by Symbol.

### BSS — Block Started by Symbol

The BSS assembler instruction is used to reserve an area of core storage, within a program, for data storage or for working space. The format of the BSS instruction follows:

Label		Operation		F	T	Operands & Res			
21	25	27	30	32	33	35	40	45	50
LABEL		BSS					Absolute Expression		

The expression specifies the number of words to be reserved; the label, if specified, refers to the leftmost word reserved. The location of the block of storage within the object program is determined by the location of the BSS statement within the source program.

If the character E is punched in column 32, the assembler assigns the leftmost word of the reserved location to the next available even location. If a blank or any character other than E appears in column 32, the assembler assigns the leftmost word of the reserved area to the next available location regardless of whether that location is even or odd. This feature is useful when defining areas for use with double precision instructions.

A BSS statement with an E format and an operand value of zero causes the Location Assignment Counter to be made even (if necessary) before the next instruction is assembled.

A BSS instruction causes an area to be reserved, not cleared; therefore, it should not be assumed that an area reserved by a BSS instruction contains zeros.

Any symbols in the operand field of a BSS assembler instruction must have been previously defined. The expression in the operand field must be an absolute expression.

In the following example, the symbol AREA is equivalent to 3000; the next location assigned is 3028.

Label		Operation		F	T	Operands & Res			
21	25	27	30	32	33	35	40	45	50
		ORG					3000		
AREA		BSS					28		

### BES — Block Ended by Symbol

The BES instruction is identical to the BSS instruction except that the address assigned to the label is the rightmost word in the area plus 1, i.e., the next location available for assignment.

In the previous example, the symbol AREA is equivalent to 3028.

## SYMBOL DEFINITION STATEMENT

One symbol definition statement (EQU) is available in the IBM 1130 Assembler language.

### EQU — Equate Symbol

The EQU statement is used to assign to a symbol a value other than the value of the Location Assignment Counter at the time the symbol is encountered. The format of the EQU statement is

Label		Operation		F	T	Operands & Res			
21	25	27	30	32	33	35	40	45	50
SYMBOL		EQU					An Expression		

The symbol in the label field is made equivalent to the value of the expression. The expression may be absolute or relocatable. All symbols appearing in this expression must have appeared as a label in a previous statement. If an asterisk (\*) is used as the expression, the value assigned to it is the next location to be assigned by the assembler.

### Examples

Label		Operation		F	T	Operands & Res			
21	25	27	30	32	33	35	40	45	50
NAME		EQU					26		
LOOPI		EQU					NAME+1		

In the first example, the symbol NAME is assigned a value of 26. In the second example, the symbol LOOP is assigned a value of 27.

## LINKING STATEMENTS

Linking statements are used to establish communication between a main program and its subroutines or between a program and the 'Monitor system.

### ENT - Define Subroutine Entry Point

The ENT statement should be used to define the entry point(s) in all subroutines except ISS and ILS. Up to fourteen entry points (ten with the Card/Paper Tape Assembler) may be defined for each subroutine (this would require an equal amount of ENT statements). The format of the ENT statement is shown below.

Label	Operation	F	T
21 25 27 30 32 33 35 40	ENT		NAME

NAME is a symbol that identifies an entry point for the associated subroutine. This symbol must be relocatable. All ENT statements for a given subroutine must be together and must precede all statements except LIBR, SPR, EPR, and comments statements. ENT, ISS, or ILS statements (see below) may not be used in the same subroutine.

### ISS - Define Interrupt Service Entry Point

IBM provides interrupt service subroutines (ISS) for all devices; however, the user is given the option of replacing or adding to these subroutines with his own. The ISS statement is used to define an entry point in an interrupt service subroutine and to establish interrupt linkages to the subroutine during loading. Only one entry point may be defined for each subroutine. The format of the ISS statement is shown below.

Label	Operation	F	T
21 25 27 30 32 33 35 40 45	ISS	NN	NAME L

Word 30 of the header record can be set for identification purposes as shown below. Word 30 is not used by any of the 1130 programs.

Label	ISS Header Word 30
blank	blank
1130	1
1800	2

NAME is as described for the ENT statement and NN (the ISS number) is a decimal number from 01 to 20 used during loading to establish the linkage from the appropriate point in the corresponding ILS. The numbers and associated devices used in the subroutines provided by IBM are listed below.

### Card/Paper Tape System and DM1 System

Number*	Device or Function
01	1442 Card Read Punch
02	Input Keyboard/Console Printer
03	1134 Paper Tape Reader; 1055 Paper Tape Punch
05	Single Disk Storage
06	1132 Printer
07	1627 Plotter
08	Synchronous Communications Adapter

\*Numbers 09 through 20 are assignable by the user.

### DM2 System

Number*	Device or Function
01	1442 Card Read Punch; 1442 Card Punch
02	Input Keyboard/Console Printer
03	1134 Paper Tape Reader; 1055 Paper Tape Punch
04	2501 Card Reader
05	Single Disk Storage; 2310 Disk Storage
06	1132 Printer
07	1627 Plotter
08	Synchronous Communications Adaptor
09	1403 Printer
10	1231 Optical Mark Page Reader
11	2250 Display Unit, Model 4

\* Numbers 12 through 20 are assignable by the user.

NOTE: User-assigned ISS numbers should start at twenty and proceed backwards in order to avoid conflict with IBM-assigned ISS numbers.

L is a one-digit number required by the Card/Paper Tape Assembler to indicate the interrupt level(s) associated with the subroutine. The level numbers (0-5) can be listed in any order in columns 45, 50, 55, 60, 65, and 70 with the first appearing in 45, the second in 50, etc.

L is not used with the monitor system. Instead, LEVEL control cards are used with the subroutine being assembled, one card per interrupt level required (see the monitor system operator's manual).

An ISS statement must precede all statements except LIBR, SPR, EPR and comments statements.

Procedures for writing ISSs are provided in the subroutine library manual for the Card/Paper Tape and DM2 systems and in the operator's manual for the DM2 system.

#### ILS - Define Interrupt Level Subroutine

IBM provides interrupt level subroutines for the various I/O devices and their associated interrupt levels; however, the user may replace or add to these subroutines with his own. The ILS statement is used to define an interrupt level subroutine and to associate the subroutine with a specific interrupt level. The format of the ILS statement is shown below.

Label				Operation				F	T	
21		25		27		30		32	33	35
				ILS				NN		

NN is the interrupt level number (00-05) associated with the interrupt level subroutine and is used during loading. The devices associated with each interrupt level are shown below:

<u>Interrupt Level</u>	<u>Device(s)</u>
00	1442 Card Read Punch (1442 Card Punch)
01	1132 Printer, Synchronous Communications Adaptor
02	Single Disk Storage (2310 Disk Storage)

#### Interrupt Level

#### Device(s)

03	1627 Plotter
04	Keyboard/Console Printer, 1442 Card Read Punch, 1134 Paper Tape Reader, 1055 Paper Tape Punch (2501 Card Reader, 1403 Printer, 1231 Optical Mark Page Reader)
05	PROGRAM STOP Key or Interrupt Run Mode.

NOTES: 1. The devices listed in parentheses are used with the DM2 system only.

2. An ILS statement must precede all statements except SPR, EPR, and comments statements.

Procedures for writing interrupt level subroutines are provided in the subroutine library manual for the Card/Paper Tape and DM1 systems and in the operator's manual for the DM2 system.

#### CALL or LIBF Subroutines

The user may reasonably ask when to write a LIBF subroutine and when a CALL subroutine. Two factors influence the decision. First, the maximum limitation on the size of the LIBF Transfer Vector limits the number of unique LIBF subroutine entry points referenced by any core load. There is no such limitation on the CALL subroutine. However, the CALL subroutine references may require more core storage. The number of words of core required by CALL or LIBF references varies with the type of call as follows:

LIBF linkage =  
(number of references to a LIBF name) + 3

CALL linkage =  
{ (number of references to a CALL name \* 3) (Monitor)  
{ (number of references to a CALL name \* 2) (Card/Paper  
Tape System)

Thus, in the Monitor System any subroutine entry name referenced four or more times in a given core load will be more economically written as a LIBF subroutine.

### CALL - Call Direct Reference Subroutine

A CALL statement is used to call any of the subroutines in the IBM Subroutine Library that are written not to utilize the LIBF Transfer Vector, whether user- or IBM-supplied. The format of the CALL statement is:

Label	Operation	F	T	
21 75	27 30	32 33	35	40
LABEL	CALL			NAME

The name of the called subroutine is assembled into the object program, together with a unique code identifying the CALL. This name occupies two words.

As a Monitor core load is being built, the first word of the called subroutine name is replaced with an indirect BSI instruction and the second word with the address of the one-word entry for that subroutine entry point in the CALL Transfer Vector, which will contain the address of the subroutine entry point.

As a Card/Paper Tape System core load is being built, the first word of the called subroutine name is replaced with a long BSI instruction and the second word of the called subroutine name with the address of the subroutine entry point. Thus, a Transfer Vector is unnecessary in this case.

### LIBF - Call TV (Transfer Vector) Reference Subroutine

A LIBF statement is used to call any of the subroutines in the IBM Subroutine Library that are written to utilize the LIBF Transfer Vector, whether user- or IBM-supplied. The format of the LIBF statement is:

Label	Operation	F	T	
21 25	27 30	32 33	35	40
LABEL	LIBF			NAME

The name of the called subroutine is assembled into the object program, together with a unique code identifying the call as a LIBF call. This is replaced during loading as follows:

Label	Operation	F	T	
21 25	27 30	32 33	35	40 45
	BSI	3		DISPLACEMENT

As indicated, Index Register 3 is required for the Transfer Vector and may be used by the user's program only if the following requirements are met:

- Index Register 3 must be saved and restored before the execution of the next LIBF statement.
- There must be no overlapping of I/O.
- There must be no possibility of interrupts from the SCA.

### LIBF Subroutine Transfer Vector

To fully understand the use of the LIBF statement, the user should be familiar with the makeup of the Transfer Vector, which allows mainlines to communicate with relocatable subroutines (and relocatable subroutines to communicate with each other) without knowing where in core storage the subroutines are loaded. The Transfer Vector consists of three words for each entry point referred to by a LIBF statement.

To build the Transfer Vector the Monitor constructs a Load Table of four words for each unique subroutine entry point referred to by a LIBF statement. The name of the subroutine entry point is stored in the first two words. The last two words of the entry are initially zero.

word 1	word 2	word 3	word 4
Name of Subroutine	zero	zero	zero

As shown above, Index Register 3 will be used during execution to point to the first word of the LIBF Transfer Vector entry. The displacement of the indexed BSI instruction replacing the LIBF statement in the object code is the displacement from the middle of a maximum size Transfer Vector (255 words) to the first word of the referenced Transfer Vector entry.

After the mainline has been processed, each subroutine named in the Load Table is processed, and the address of the entry point is stored in the third word of the Load Table entry. The fourth word of the entry is used for several purposes during processing.

word 1	word 2	word 3	word 4
Name of Subroutine		Entry address of Subroutine	undefined

Any subroutines referenced by LIBF statements as the subroutines are being loaded are added to the Load Table (if they are not already there) and processed in the same manner. After the core load has been built, the Transfer Vector is created. The first word of each entry is set to zero, a long BSC instruction is placed in the second word, and the subroutine entry point address (from the corresponding Load Table entry) is stored in the third word.

word 1	word 2	word 3
zero	BSC L	Entry address of Subroutine

In the Card/Paper Tape System, the Load Table, which consists of three-word entries, becomes the Transfer Vector. As the LIBF statements are encountered during loading, the subroutine entry point name is stored to the first two words of the Transfer Vector entry. The third word of the Transfer Vector entry is initially zero.

word 1	word 2	word 3
Name of Subroutine		zero

The displacement of the indexed BSI instruction replacing the LIBF statement in the object code is the displacement from the middle of a maximum size Transfer Vector to the first word of the Transfer Vector entry.

As the subroutines are loaded, the third word of each Transfer Vector entry is replaced with the address of the subroutine entry point. The first word is cleared to zero, and a long BSC instruction is stored in the second word.

word 1	word 2	word 3
zero	BSC L	Entry address of Subroutine

## LIBF Subroutine Execution


As the mainline is executed, the subroutine calls are encountered one by one. Each LIBF statement is now in the form of a BSI instruction. The BSI instruction stores the contents of the IAR into the first word of the Transfer Vector entry associated with the subroutine being called and then branches to the second word of the same Transfer Vector entry. As a result, the first word of the Transfer Vector entry contains the address of LIBF + 1.

word 1	word 2	word 3
LIBF + 1 Address	BSC L	Entry Address of Subroutine

Following execution of the BSI instruction, the BSC instruction in word 2 of the Transfer Vector entry is executed, transferring control to the subroutine. In order to access parameters and to return from a subroutine to the calling program, the subroutine must know the address of the Transfer Vector entry associated with the subroutine. This address was placed into the subroutine entry point + 2 as the core load was built. With this information the return address and the parameters associated with the LIBF statement may be determined by the subroutine itself. See Figure 5.

## Size and Location of the Transfer Vector

The maximum size of the Monitor Transfer Vector is 85 three-word entries, including an entry for the Floating Accumulator (FAC) and the function indicators.

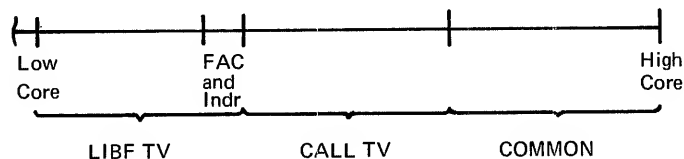

The Card/Paper Tape System Transfer Vector consists of a maximum of 256 words.

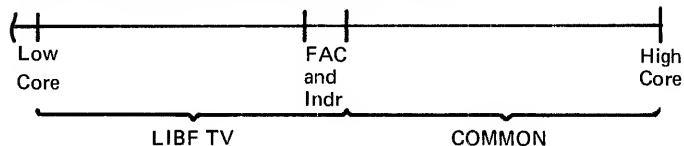


Figure 5. Sample LIBF Coding Sequence

Label	Operation	F	T	Operands & Remarks
21	25	27	30	32 33 35 40 45 50 55 60 65 70
	LIBF			SUBR MAIN PROGRAM CALL
	DC			ARG ADDRESS OF ARGUMENT
	.			
	.			
	END			START END OF MAIN PROGRAM
	LIBR			
	ENT			SUBR SUBROUTINE HEADER STATEMENT
SUBR	STX	2		SAVE+1, SAVE INDEX REGISTER 2
	LDX	I2		*~* THIS LOCATION WILL BE BLANK
*				WHEN SUBR IS ASSEMBLED,
*				BUT WILL BE FILLED WITH TV
*				ENTRY ADDRESS BY THE LOADER
	LD	I2	0	FETCH ARGUMENT INTO ACC
	.			
	.			} MAIN BODY OF SUBROUTINE
	.			
	MDX	2		+1 INCREMENT INDEX REGISTER 2
	STX	2		LEAVE+1, *FOR AND STORE RETURN ADDR
SAVE	LDX	I2		*~* RESTORE INDEX REGISTER 2
LEAVE	BSC	I		*~* RETURN TO MAIN PROGRAM
	END			

## MONITOR ASSEMBLER STATEMENTS

In addition to the basic assembler statements, the IBM 1130 Monitor Assembler is provided with the following capabilities.

## Disk Data Organization

- DSA - Define Sector Address  
FILE - Define Disk File (DM2 only)

## Data Definition

- DMES - Define Message (DM2 only)  
DN - Define Name (DM2 only)

## Linking

- LINK - Load and Execute Another Program
- EXIT - Return Control to Supervisor
- DUMP - Dump and Terminate (DM2 only)
- PDMP - Dump and Continue (DM2 only)

## List Control

- |      |   |                                      |
|------|---|--------------------------------------|
| HDNG | - | Print Heading on Each Page           |
| LIST | - | List Segments of Programs (DM2 only) |
| SPAC | - | Space Listing (DM2 only)             |
| EJCT | - | Start New Page (DM2 only)            |

## DISK DATA ORGANIZATION STATEMENTS

DSA - Define Sector Address

The DSA statement allows the programmer to refer symbolically to a disk-stored data file or program stored in Disk Core Image format (DCI) without knowing the specific disk location of the data or program. The disk location of data files and programs can vary on disk because of deletions, but the DSA statement allows easy reference through the use of the symbolic name of the data file or program.

The format of the DSA statement is:

[illegible]

The label is defined as the current value of the Location Assignment Counter when the DSA statement is encountered. The symbol in the operand field must be the name of a data file or DCI program that is on disk both when the assembly is made and during execution.

The following statements illustrate the use of the DSA statement to read one sector of data. For a description of the disk calling sequences, see the **system subroutines library manual**.

Label		Operation		F	T	Operands & Results			
21	25	27	30	32	33	35	40	45	50
		•							
		•							
		L, I, B, F				D, I, S, K, I			
		D, C				/, /, 0, 0, 0			
		D, C				I, O, A, R			
		D, C				E, R, R, O, R			
		•							
I, O, A, R		D, S, A				D, A, T, A			
		B, S, S				3, 1, 9			
		•							
		•							

The Assembler reserves three words in the object program for each DSA statement. These words are filled in by the Core Load Builder. For a data file they will contain:

Word 1 — Length (in words)

Word 2 — Sector Address, including the drive code

Word 3 — Sector count of the file

For a program they will contain:

Word 1 – Length (in words)

Word 2 — Sector Address, including the drive code

Word 3 — Execution Address of the Program

If the area corresponding to the DSA statement is used as the I/O area for a disk read operation, the execution address of the program must be saved prior to the disk call to bring in the program. (The contents of the third word are destroyed by the incoming data).



Label	Operation	F	T	Operands & Result
27	26	32	31	30
	•			
	•			
	L.D.			I.O.A.R.+2
	S.T.O.			BRNCH+1
READ	LI.B.F			DISK1
	D.C.			/1.0000
	D.C.			I.O.A.R
	D.C.			ERROR
CALL	LI.B.F			DISK1
	D.C.			/0.0000
	D.C.			I.O.A.R
	MDX			CALL
BRNCH	B.S.C	L		0
	•			
	•			
	•			
I.O.A.R	D.S.A			PRGRM
	B.S.S			3,1,9
	•			
	•			

Label		Operation	F	T	Operands and Result	
21	25	2" 3C	32	33	35	40 45 46
		L, D,				A, D, R, 2,
		S, T, O,				I, O, A, R,
		L, D,				A, D, R, 2, +, 1,
		S, T, O,				I, O, A, R, +, 1,
		L, D,				A, D, R, 2, +, 2,
		S, T, O,				B, R, N, C, H, +, 1,
		M, D, X,				R, E, A, D,
A, D, R, 2,		D, S, A,				P, G, R, M, 2,
		•				
		•				

## Programming Considerations

- The called programs must be in DCI format.
- If the calling program is converted to DCI format, the data for the DSA statement is filled in during the core image conversion and will be fixed for all subsequent executions. Thus, if the referenced program or data files are subsequently moved, incorrect results will occur. Data files referenced by a Core Image program should be stored in the Fixed area.
- Any loading functions, such as the setting of Index Register 3, will have to be supplied by the calling program.

The FILE statement specifies to the Assembler the file identification, the number of file records in a file, and the size of each record in a disk data file that will be used with a particular mainline and its associated subprograms. The Assembler FILE statement allows the Assembler language user to define files so that they are similar to FORTRAN defined files.

The FILE statement must not appear in a subprogram; it is permitted only in a relocatable mainline program. Therefore, all subprograms used by the mainline must use the defined files of the mainline. The format of the FILE statement is as follows:

[illegible]

1 is any valid label (optional),

a is the file identification number, a decimal integer in the range 1-32767,

m is a decimal integer that defines the number of records in the file,

n is a decimal integer in the range 1-320 that defines the length (in words) of the longest record in the file.

U is a required constant, specifying that the file must be read/written with no data conversion,

v is the associated variable, the label of a core location (variable) defined elsewhere in the program.

FILE statements must precede all other statements except HDNG, EPR, SPR, EJCT, SPAC, and LIST in the source program. The label, if used, is assigned the location of the first word of the seven words generated (see list below). The Format and Tag fields are not used and should be left blank.

Each FILE statement causes the Location Assignment Counter to be incremented by seven. The data stored in these seven words, which constitute a DEFINE FILE Table entry in the object program is as follows:

Word	Contents
1	a, the file identification number
2	m, the number of records per file
3	n, the record length (in words)
4	The address of the associated variable, v.
5	Zero. This word is filled by the Core Load Builder with the sector address of the data file. This address is relative to the address of Working Storage (with bit zero set to one) for Working Storage files and is absolute, including the drive code, for User/Fixed area files.
6	r, the number of records per sector. The number, computed by the Assembler, is the quotient of
	$\frac{320}{n}$
	(remainder ignored)
7	b, the number of disk blocks per file. This number, computed by the Assembler, is the quotient of
	$\frac{16(m)}{r}$

## DATA DEFINITION STATEMENTS

### DMES - Define Message (DM2)

The DMES statement is used to store a message within a program in a form that is acceptable to the printer output subroutines. The format of the DMES statement follows:

Label	Operation	F	T	Operands & Remarks
21	25	27	30	32 33 35 40 45 50
<i>L</i>	<i>DMES</i>		<i>p</i>	<i>m</i>

where

*L* is any valid label (optional),

*p* is the printer type code,

*m* is any string of valid message and control characters.

If a label is present, it is assigned to the location of the first word generated. The Tag field (column 33) is used to specify the printer type code:

Tag	Printer
b or 0	Console Printer
1	1403 Printer
2	1132 Printer

If the Tag field (printer type code) contains a character other than blank, zero, one, or two, an error results and the message is stored two EBCDIC characters per word.

The Operand field contains the control and message characters. Remarks are permitted only after an 'E' or 'b' control character.

The output generated by one DMES statement cannot exceed 60 words (120 characters). If an odd number of characters is generated, the last word is filled in with a blank, except when the statement ends with 'b'. In this case, the first character of the next DMES statement is used to fill out the word.

Control characters are used to specify certain printer operations and to define message parameters. Each control character is actually two characters, the first of which is always an apostrophe. The apostrophe (5-8 punch in IBM Card Code) is a control



If a label is used, the address assigned to it is the location of the first word of the two words generated and is equal to the current value of the Location Assignment Counter. Columns 32 and 33 must be blank. The operand can have up to five characters that comply with the rules for writing symbols. The name to be converted must be left-justified in the Operand field. If remarks are used, one blank must be left between the operand and the remarks. The Location Assignment Counter is incremented by two for this statement.

## LINKING STATEMENTS

### LINK — Load Link Program

In the assembler language, the LINK statement is used to cause another core load to be loaded and executed. Only COMMON of the current core load is saved. The program loaded and executed must be specified by name. The format of the LINK statement is:

1. A symbol or blanks in the label field
2. The mnemonic, LINK, in columns 27-30
3. A valid program name in the operand field

The label of the LINK pseudo-operation is defined as the current value of the Location Assignment Counter when the LINK statement is encountered; this value is the address of the first word generated by the LINK statement.

The operand field contains a valid program name (one to five alphameric characters), left-justified in the field. The name must be present in LET/FLET at execution time. The LINK statement causes four words to be generated in the object program. The first two words contain a long BSI instruction, which branches to a specified location within the Skeleton Supervisor. The next two words contain the program name in Name Code (see DN - Define Name). The Core Image Loader uses the core load name and begins the process required to load the new core load.

### EXIT — Return to Supervisor

In the assembler language, the EXIT statement is used to return control to the Supervisor. The format of the EXIT statement is:

1. A symbol or blanks in the label field
2. The mnemonic, EXIT, in columns 27-30

The label of the EXIT statement is defined as the current value of the Location Assignment Counter when the EXIT statement is encountered; this value is the address of the instruction generated by an EXIT statement. The operand field is ignored and can therefore be used for remarks.

The EXIT statement causes a short branch instruction to be generated in the object program. The instruction branches to a fixed location in the Skeleton Supervisor. During execution, the branch is executed and control is returned to the Supervisor. The EXIT statement should be the last logical statement in a program.

### DUMP — Dump and Terminate Execution

The DUMP statement provides an entry to the System DUMP program, which prints the contents of core storage on the principal print device in hexadecimal format.

The DUMP statement allows for flexible specification of the upper and lower limits to be dumped without altering core storage. After core has been dumped between the limits specified, the System Dump returns control to the calling program, at which point a CALL EXIT is executed. The DUMP statement is written as follows:

Label					Operation					F	T	Operands & Remarks									
21	25	27	30	32	33	35	40	45	50												
<i>l</i>						<i>DUMP</i>						<i>a<sub>1</sub></i>	<i>b<sub>1</sub></i>	<i>f</i>							

where

*l* is any valid label (optional),

*a* is any valid expression specifying the lowest-addressed core location to be dumped,

*b* is any valid expression specifying the highest-addressed core location to be dumped,

*f* is the dump format code (either blank or zero). The dump is always in hexadecimal format.

The label, if used, is assigned the location of the first of the six words generated (see list below). The Tag and Format fields must be left blank.

A DUMP statement causes the Location Assignment Counter to be incremented by six. The data stored in these six words is as follows:

<u>Word</u>	<u>Contents</u>
1 }	A long (two-word) BSI to the DUMP entry
2 }	point in the Skeleton Supervisor
3	The format indicator (always zero)
4	The starting address of the core dump
5	The ending location of the core dump
6	A short branch to the EXIT entry point in the Skeleton Supervisor

If no address is specified for word 3, the dump starts in location zero. If no address is specified for word 4, the dump continues to the end of core.

A DUMP statement can be used at any point in a program; however, the user is reminded that DUMP causes a terminal DUMP to be printed. At the completion of the dump printout, the branch to EXIT is executed, thus transferring control to the Skeleton Supervisor for processing of the next job or subjob.

The format of the DUMP program output is as follows:

AAAA    xxxx   xxxx   xxxx   ||   xxxx   xxxx   xxxx

The contents (xxxx) of 16 core storage locations are printed per line. At the left is the address (AAAA) of the first location printed on that line.

## PDMP – Dump and Continue Execution

The PDMP statement provides the ability to dump core storage between specified limits and to continue execution. The core dump is printed on the principal print device without altering core. The PDMP statement is specified in the same way as DUMP, except that PDMP appears in columns 27-30 instead of DUMP.

The PDMP statement is translated by the Assembler into a long BSI to the DUMP entry point in the Skeleton Supervisor. The parameters (operands) are converted as described in the DUMP statement (see above) except that the exit to the Supervisor is not generated for PDMP.

Upon completion of the printout of the core dump, control is returned to the next instruction following the PDMP statement to continue execution.

## LIST CONTROL STATEMENTS

The list control statements — HDNG, LIST, SPAC, and EJCT — provide the user with the means to control and identify the assembler output listing.

## HDNG — Heading

The HDNG statement is used to specify a one line page heading for a printed listing. The heading line consists of the data in the Operand-Remarks field.

The format of the HDNG statement is as follows.

Label		Operation		F	T	Operands & Res				
21	25	27	30	32	33	35	40	45	50	
		H,D,N,G				PAGE HEADING				

Multiple HDNG statements may be used thus allowing different sections of a listing to have different page headings.

When the 1132 or 1403 is the principal printer, the HDNG statement causes the listing to be ejected to a new page and the heading is printed. The same heading is repeated at the top of each succeeding page until a new HDNG statement is encountered.

When the Console Printer is the principal printer, the heading line is preceded by five line feeds and followed by a single line feed, and otherwise functions as a comments statement.

LIST — List Segments of Program

The LIST statement allows the user to list certain segments of a program on the principal printer and avoid listing other segments. The three variations of the LIST statement are shown below:

[illegible]

The Label, Tag, and Format fields are not used with the LIST statement and should be left blank. The Operand field may be left blank or may contain the operand ON or OFF.

The LIST statement does not cause the Location Assignment Counter to be incremented.

If a LIST statement with the operand ON is encountered, the following statements, up to the next LIST statement, are listed by the Assembler.

If a LIST statement with no operand is encountered, the Assembler assumes an operand depending on the use of the LIST control record. If the LIST control record preceded the assembly, the ON operand is assumed and the Assembler acts accordingly. If the LIST control record did not precede the assembly, the OFF operand is assumed and the Assembler acts accordingly.

### SPAC — Space Listing

The SPAC statement is used to insert one or more blank lines in the listing immediately following the SPAC statement. The format of the SPAC statement is as follows:

Label	Operation	F	T	Operands & Re
21	25	27	30	32 33 35 40 45 50
	SPAC			e

where e is any valid positive expression.

The Label, Format, and Tag fields are not used and should be left blank.

The number of blank lines inserted in the listing is determined by the operand in the statement. The

operand can be any valid expression. The operand (expression) value must be positive; otherwise, the Assembler ignores the statement.

When the number of blank lines specified exceeds the number of lines left on the page, the page is spaced to the bottom, a restore occurs, a new heading is printed, and spacing is resumed until the number of blank lines specified has been exhausted.

The SPAC statement does not cause the Location Assignment Counter to be incremented.

### EJCT — Start New Page

The EJCT statement causes the next line of the listing to appear at the top of a new page following the page heading. The format of the EJCT statement is as follows:

Label	Operation	F	T	Operands & Re
21	25	27	30	32 33 35 40 45 50
	EJCT			

The Label, Tag, Format, and Operand fields are not used and should be left blank.

A page overflow occurs immediately following the EJCT statement. EJCT statements may be used in succession to obtain blank pages (except for the headings printed).

The EJCT statement does not cause the Location Assignment Counter to be incremented.

Hexadecimal Notation

In hexadecimal notation, each digit represents a four-bit binary value. This means that a 16-bit word in the Processor-Controller can be expressed as four hexadecimal digits. The binary — hexadecimal — decimal correspondence is defined as follows:

<u>Binary</u>	<u>Hexadecimal</u>	<u>Decimal</u>
0000	0	0
0001	1	1
0010	2	2
0011	3	3
0100	4	4
0101	5	5
0110	6	6
0111	7	7
1000	8	8
1001	9	9
1010	A	10
1011	B	11
1100	C	12
1101	D	13
1110	E	14
1111	F	15

Extended Binary Coded Decimal Interchange Code (EBCDIC)

In the EBCDIC code, each character is represented by a unique configuration of eight binary bits. In

the table that follows, each EBCDIC character is expressed as two hexadecimal digits.

IBM Card Code

In the IBM Card Code, each character represents a 12-bit card-column image. In the table that follows, each card code character is expressed as four hexadecimal digits and as the card-column image.

Paper Tape Transmission Code, 8 Channel (PTTC/8)

In the PTTC/8 code, each character is represented by a unique configuration of a case shift, plus an eight-bit code. The case shift can be common to more than one character and need be inserted only when a case shift change is necessary. In the table that follows, each character is expressed as two hexadecimal digits, followed by the case shift in parentheses.

1132 Printer EBCDIC Subset Hex Code

In the 1132 Printer EBCDIC subset hex code, each character is represented by a unique configuration of eight bits. In the table that follows, each 1132 Printer character is expressed as two hexadecimal digits.

Console Printer Hex Code

In the Console Printer hexadecimal code each character is represented as two hexadecimal digits.

1403 Printer Hex Code

In the 1403 Printer hexadecimal code each character is represented as two hexadecimal digits.

Ref No.	EBCDIC		Hex	IBM Card Code					Hex	Graphics and Control Names	1132 Printer EBCDIC Subset Hex	PTTC/8 Hex U-Upper Case L-Lower Case	Console Printer Hex Notes	1403 Printer Hex
	Binary			12	11	0	9	8	7-1					
0	0000	0000	00	12		0	9	8	1	8030	NUL			
1		0001	01	12			9		1	9010				
2		0010	02	12			9		2	8810				
3		0011	03	12			9		3	8410				
4		0100	04	12			9		4	8210				
5*		0101	05	12			9		5	8110	PF			
6*		0110	06	12			9		6	8090	HT	Punch Off	41 ①	
7*		0111	07	12			9		7	8050	LC	Horiz. Tab		
8		1000	08	12			9	8		8030	DEL	Lower Case		
9		1001	09	12			9	8	1	9030				
10		1010	0A	12			9	8	2	8830				
11		1011	0B	12			9	8	3	8430				
12		1100	0C	12			9	8	4	8230				
13		1101	0D	12			9	8	5	8130				
14		1110	0E	12			9	8	6	8080				
15		1111	0F	12			9	8	7	8070				
16	0001	0000	10	12	11		9	8	1	D030				
17		0001	11		11		9		1	5010				
18		0010	12		11		9		2	4810				
19		0011	13		11		9		3	4410				
20*		0100	14		11		9		4	4210	RES			
21*		0101	15		11		9		5	4110	NL	Restore	05 ②	
22*		0110	16		11		9		6	4090	BS	New Line	81 ③	
23		0111	17		11		9		7	4050	IDL	Backspace	11	
24		1000	18		11		9	8		4030				
25		1001	19		11		9	8	1	5030				
26		1010	1A		11		9	8	2	4830				
27		1011	1B		11		9	8	3	4430				
28		1100	1C		11		9	8	4	4230				
29		1101	1D		11		9	8	5	4130				
30		1110	1E		11		9	8	6	4080				
31		1111	1F		11		9	8	7	4070				
32	0010	0000	20		11	0	9	8	1	7030				
33		0001	21			0	9		1	3010				
34		0010	22			0	9		2	2810				
35		0011	23			0	9		3	2410				
36		0100	24			0	9		4	2210	BYP			
37*		0101	25			0	9		5	2110	LF	Bypass	03	
38*		0110	26			0	9		6	2090	EOB	Line Feed		
39		0111	27			0	9		7	2050	PRE	End of Block		
40		1000	28			0	9	8		2030		Prefix		
41		1001	29			0	9	8	1	3030				
42		1010	2A			0	9	8	2	2830				
43		1011	2B			0	9	8	3	2430				
44		1100	2C			0	9	8	4	2230				
45		1101	2D			0	9	8	5	2130				
46		1110	2E			0	9	8	6	2080				
47		1111	2F			0	9	8	7	2070				
48	0011	0000	30	12	11	0	9	8	1	F030				
49		0001	31				9		1	1010				
50		0010	32				9		2	0810				
51		0011	33				9		3	0410				
52		0100	34				9		4	0210	PN			
53*		0101	35				9		5	0110	RS	Punch On		
54*		0110	36				9		6	0090	UC	Reader Stop	09 ④	
55		0111	37				9		7	0050	EOT	Upper Case		
56		1000	38				9	8		0030		End of Trans.		
57		1001	39				9	8	1	1030				
58		1010	3A				9	8	2	0830				
59		1011	3B				9	8	3	0430				
60		1100	3C				9	8	4	0230				
61		1101	3D				9	8	5	0130				
62		1110	3E				9	8	6	0080				
63		1111	3F				9	8	7	0070				

NOTES: Typewriter Output

① Tabulate

② Shift to black

③ Carrier Return

④ Shift to red

\* Recognized by all Conversion subroutines

Codes that are not asterisked are recognized only by the SPEED subroutine



Ref No.	EBCDIC			IBM Card Code					Graphics and Control Names	1132 Printer EBCDIC Subset Hex	PTTC/8 Hex U-Upper Case L-Lower Case	Console Printer Hex	1403 Printer Hex		
	Binary	Hex	Rows	Hex											
	0123	4567		12	11	0	9	8	7-1						
64*	0100	0000	40	no punches					0000	blank	40	10 (U/L)	21	7F	
65	↓	0001	41	12		0	9		1	8010	‡ (period) < ( +   (logical OR)	20 (U) 6B (L) 02 (U) 19 (U) 70 (U) 3B (U)	02 00 DE FE DA C6	6E   57 6D	
66		0010	42	12		0	9		2	A810					
67		0011	43	12		0	9		3	A410					
68		0100	44	12		0	9		4	A210					
69		0101	45	12		0	9		5	A110					
70		0110	46	12		0	9		6	A090					
71		0111	47	12		0	9		7	A050					
72		1000	48	12		0	9		8	A030					
73		1001	49	12				8		9020					
74*		1010	4A	12				8		8820					
75*		1011	4B	12				8		8420					
76*		1100	4C	12				8		8220					
77*		1101	4D	12				8		8120					
78*		1110	4E	12				8		80A0					
79*		1111	4F	12				8		8060					
80*	0101	0000	50	12					8000	&	50	70 (L)	44	15	
81	↓	0001	51	12	11		9		1	D010	! \$ * ) ; (logical NOT)	5B (U) 5B (L) 08 (U) 1A (U) 13 (U) 6B (U)	42 40 D6 F6 D2 F2	62 23 2F	
82		0010	52	12	11		9		2	C810					
83		0011	53	12	11		9		3	C410					
84		0100	54	12	11		9		4	C210					
85		0101	55	12	11		9		5	C110					
86		0110	56	12	11		9		6	C090					
87		0111	57	12	11		9		7	C050					
88		1000	58	12	11		9		8	C030					
89		1001	59	11				8		1 5020					
90*		1010	5A	11				8		2 4820					
91*		1011	5B	11				8		3 4420					
92*		1100	5C	11				8		4 4220					
93*		1101	5D	11				8		5 4120					
94*		1110	5E	11				8		6 40A0					
95*		1111	5F	11				8		7 4060					
96*	0110	0000	60		11				4000	- (dash)	60	40 (L)	84	61	
97*	↓	0001	61			0			1	3000	/   (comma) % (underscore) _ ?  : # @ ' (apostrophe) = "	61	31 (L)	BC	61 4C
98		0010	62		11	0	9		2	6810					
99		0011	63		11	0	9		3	6410					
100		0100	64		11	0	9		4	6210					
101		0101	65		11	0	9		5	6110					
102		0110	66		11	0	9		6	6090					
103		0111	67		11	0	9		7	6050					
104		1000	68		11	0	9		8	6030					
105		1001	69			0			8	1 3020					
106		1010	6A	12	11					C000					
107*		1011	6B			0		8	3	2420					
108*		1100	6C			0		8	4	2220					
109*		1101	6D			0		8	5	2120					
110*		1110	6E			0		8	6	20A0					
111*		1111	6F			0		8	7	2060					
112	0111	0000	70	12	11	0			E000	: # @ ' (apostrophe) = "	7D 7E	04 (U) 0B (L) 20 (L) 16 (U) 01 (U) 0B (U)	82 C0 04 E6 C2 E2	0B 4A	
113	0001	71	12	11	0	9		1	F010						
114	0010	72	12	11	0	9		2	E810						
115	0011	73	12	11	0	9		3	E410						
116	0100	74	12	11	0	9		4	E210						
117	0101	75	12	11	0	9		5	E110						
118	0110	76	12	11	0	9		6	E090						
119	0111	77	12	11	0	9		7	E050						
120	1000	78	12	11	0	9		8	E030						
121	1001	79					8	1	1020						
122*	1010	7A					8	2	0820						
123*	1011	7B					8	3	0420						
124*	1100	7C					8	4	0220						
125*	1101	7D					8	5	0120						
126*	1110	7E					8	6	00A0						
127*	1111	7F					8	7	0060						

Ref No.	EBCDIC		IBM Card Code				Graphics and Control Names	1132 Printer EBCDIC Subset Hex	PTTC/8 Hex U-Upper Case L-Lower Case	Console Printer Hex	1403 Printer Hex	
	Binary	Hex	Rows									Hex
	0123	4567		12	11	0	9	8	7-1			
128	1000	0000	80	12		0		8	1	B020	a b c d e f g h i	
129		0001	81	12		0			1	B000		
130		0010	82	12		0			2	A800		
131		0011	83	12		0			3	A400		
132		0100	84	12		0			4	A200		
133		0101	85	12		0			5	A100		
134		0110	86	12		0			6	A080		
135		0111	87	12		0			7	A040		
136		1000	88	12		0		8		A020		
137		1001	89	12		0	9			A010		
138		1010	8A	12		0		8	2	A820		
139		1011	8B	12		0		8	3	A420		
140		1100	8C	12		0		8	4	A220		
141		1101	8D	12		0		8	5	A120		
142		1110	8E	12		0		8	6	A0A0		
143	↓	1111	8F	12		0		8	7	A060		
144	1001	0000	90	12	11			8	1	D020	j k l m n o p q r	
145		0001	91	12	11				1	D000		
146		0010	92	12	11				2	C800		
147		0011	93	12	11				3	C400		
148		0100	94	12	11				4	C200		
149		0101	95	12	11				5	C100		
150		0110	96	12	11				6	C080		
151		0111	97	12	11				7	C040		
152		1000	98	12	11			8		C020		
153		1001	99	12	11		9			C010		
154		1010	9A	12	11			8	2	C820		
155		1011	9B	12	11			8	3	C420		
156		1100	9C	12	11			8	4	C220		
157		1101	9D	12	11			8	5	C120		
158	↓	1110	9E	12	11			8	6	C0A0		
159		1111	9F	12	11			8	7	C060		
160	1010	0000	A0		11	0		8	1	7020	s t u v w x y z	
161		0001	A1		11	0			1	7000		
162		0010	A2		11	0			2	6800		
163		0011	A3		11	0			3	6400		
164		0100	A4		11	0			4	6200		
165		0101	A5		11	0			5	6100		
166		0110	A6		11	0			6	6080		
167		0111	A7		11	0			7	6040		
168		1000	A8		11	0		8		6020		
169		1001	A9		11	0	9			6010		
170		1010	AA		11	0		8	2	6820		
171		1011	AB		11	0		8	3	6420		
172		1100	AC		11	0		8	4	6220		
173		1101	AD		11	0		8	5	6120		
174	↓	1110	AE		11	0		8	6	60A0		
175		1111	AF		11	0		8	7	6060		
176	1011	0000	B0	12	11	0		8	1	F020		
177		0001	B1	12	11	0			1	F000		
178		0010	B2	12	11	0			2	E800		
179		0011	B3	12	11	0			3	E400		
180		0100	B4	12	11	0			4	E200		
181		0101	B5	12	11	0			5	E100		
182		0110	B6	12	11	0			6	E080		
183		0111	B7	12	11	0			7	E040		
184		1000	B8	12	11	0		8		E020		
185		1001	B9	12	11	0	9			E010		
186		1010	BA	12	11	0		8	2	E820		
187		1011	BB	12	11	0		8	3	E420		
188		1100	BC	12	11	0		8	4	E220		
189		1101	BD	12	11	0		8	5	E120		
190	↓	1110	BE	12	11	0		8	6	E0A0		
191		1111	BF	12	11	0		8	7	E060		

Ref No.	EBCDIC		Hex	IBM Card Code					Hex	Graphics and Control Names	1132 Printer EBCDIC Subset Hex	PTTC/8 Hex U-Upper Case L-Lower Case	Console Printer Hex	1403 Printer Hex
	0123	4567		12	11	0	9	8	7-1					
192	1100	0000	C0	12		0				A000	(+ zero)			
193*		0001	C1	12					1	9000	A			64
194*		0010	C2	12					2	8800	B		3C or 3E	25
195*		0011	C3	12					3	8400	C		18 or 1A	26
196*		0100	C4	12					4	8200	D		1C or 1E	67
197*		0101	C5	12					5	8100	E		30 or 32	68
198*		0110	C6	12					6	8080	F		34 or 36	29
199*		0111	C7	12					7	8040	G		10 or 12	2A
200*		1000	C8	12				8		8020	H		14 or 16	6B
201*		1001	C9	12			9			8010	I		24 or 26	2C
202		1010	CA	12		0	9	8	2	A830			20 or 22	
203		1011	CB	12		0	9	8	3	A430				
204		1100	CC	12		0	9	8	4	A230				
205		1101	CD	12		0	9	8	5	A130				
206		1110	CE	12		0	9	8	6	A0B0				
207		1111	CF	12		0	9	8	7	A070				
208	1101	0000	D0		11	0				6000	(- zero)			
209*		0001	D1		11				1	5000	J			58
210*		0010	D2		11				2	4800	K		7C or 7 E	19
211*		0011	D3		11				3	4400	L		58 or 5A	1A
212*		0100	D4		11				4	4200	M		5C or 5E	5B
213*		0101	D5		11				5	4100	N		70 or 72	1C
214*		0110	D6		11				6	4080	O		74 or 76	5D
215*		0111	D7		11				7	4040	P		50 or 52	5E
216*		1000	D8		11			8		4020	Q		54 or 56	1F
217*		1001	D9		11		9			4010	R		64 or 66	20
218		1010	DA	12	11		9	8	2	C830			60 or 62	
219		1011	DB	12	11		9	8	3	C430				
220		1100	DC	12	11		9	8	4	C230				
221		1101	DD	12	11		9	8	5	C130				
222		1110	DE	12	11		9	8	6	C0B0				
223		1111	DF	12	11		9	8	7	C070				
224	1110	0000	E0			0		8	2	2820				
225		0001	E1		11	0	9		1	7010				0D
226*		0010	E2			0			2	2800	S		98 or 9A	0E
227*		0011	E3			0			3	2400	T		9C or 9E	4F
228*		0100	E4			0			4	2200	U		B0 or B2	10
229*		0101	E5			0			5	2100	V		B4 or B6	51
230*		0110	E6			0			6	2080	W		90 or 92	52
231*		0111	E7			0			7	2040	X		94 or 96	13
232*		1000	E8				0	8		2020	Y		A4 or A6	54
233*		1001	E9				0	9		2010	Z		A0 or A2	
234		1010	EA		11	0	9	8	2	6830				
235		1011	EB		11	0	9	8	3	6430				
236		1100	EC		11	0	9	8	4	6230				
237		1101	ED		11	0	9	8	5	6130				
238		1110	EE		11	0	9	8	6	60B0				
239		1111	EF		11	0	9	8	7	6070				
240*	1111	0000	F0			0				2000	0		C4	49
241*		0001	F1						1	1000	1	1A (L)	FC	40
242*		0010	F2						2	0800	2	01 (L)	D8	01
243*		0011	F3						3	0400	3	02 (L)	DC	02
244*		0100	F4						4	0200	4	13 (L)	F0	43
245*		0101	F5						5	0100	5	04 (L)	F4	04
246*		0110	F6						6	0080	6	15 (L)	D0	45
247*		0111	F7						7	0040	7	16 (L)	D4	46
248*		1000	F8					8		0020	8	07 (L)	E4	07
249*		1001	F9					9		0010	9	08 (L)	E0	08
250		1010	FA	12	11	0	9	8	2	E830		19 (L)		
251		1011	FB	12	11	0	9	8	3	E430				
252		1100	FC	12	11	0	9	8	4	E230				
253		1101	FD	12	11	0	9	8	5	E130				
254		1110	FE	12	11	0	9	8	6	E0B0				
255		1111	FF	12	11	0	9	8	7	E070				

# APPENDIX B. HEXADECIMAL-DECIMAL CONVERSION CHART

The tables printed below are used to convert decimal numbers to hexadecimal and hexadecimal numbers to decimal. In the descriptions that follow, the explanation of each step is followed by an example in parentheses.

**Decimal to Hexadecimal Conversion.** Locate the decimal number (0489) in the body of the table. The two high-order digits (1E) of the hexadecimal number are in the left column on the same line, and the low-order digit (9) is at the top of the column. Thus, the hexadecimal number 1E9 is equal to the decimal number 0489.

**Hexadecimal to Decimal Conversion.** Locate the first two digits (1E) of the hexadecimal number (1E9) in the left column. Follow the line of figures across the page to the column headed by the low-order digit (9). The decimal number (0489) located at the junction of the horizontal line and the vertical column is the equivalent of the hexadecimal number.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	0000	0001	0002	0003	0004	0005	0006	0007	0008	0009	0010	0011	0012	0013	0014	0015
01	0016	0017	0018	0019	0020	0021	0022	0023	0024	0025	0026	0027	0028	0029	0030	0031
02	0032	0033	0034	0035	0036	0037	0038	0039	0040	0041	0042	0043	0044	0045	0046	0047
03	0048	0049	0050	0051	0052	0053	0054	0055	0056	0057	0058	0059	0060	0061	0062	0063
04	0064	0065	0066	0067	0068	0069	0070	0071	0072	0073	0074	0075	0076	0077	0078	0079
05	0080	0081	0082	0083	0084	0085	0086	0087	0088	0089	0090	0091	0092	0093	0094	0095
06	0096	0097	0098	0099	0100	0101	0102	0103	0104	0105	0106	0107	0108	0109	0110	0111
07	0112	0113	0114	0115	0116	0117	0118	0119	0120	0121	0122	0123	0124	0125	0126	0127
08	0128	0129	0130	0131	0132	0133	0134	0135	0136	0137	0138	0139	0140	0141	0142	0143
09	0144	0145	0146	0147	0148	0149	0150	0151	0152	0153	0154	0155	0156	0157	0158	0159
0A	0160	0161	0162	0163	0164	0165	0166	0167	0168	0169	0170	0171	0172	0173	0174	0175
0B	0176	0177	0178	0179	0180	0181	0182	0183	0184	0185	0186	0187	0188	0189	0190	0191
0C	0192	0193	0194	0195	0196	0197	0198	0199	0200	0201	0202	0203	0204	0205	0206	0207
0D	0208	0209	0210	0211	0212	0213	0214	0215	0216	0217	0218	0219	0220	0221	0222	0223
0E	0224	0225	0226	0227	0228	0229	0230	0231	0232	0233	0234	0235	0236	0237	0238	0239
0F	0240	0241	0242	0243	0244	0245	0246	0247	0248	0249	0250	0251	0252	0253	0254	0255
10	0256	0257	0258	0259	0260	0261	0262	0263	0264	0265	0266	0267	0268	0269	0270	0271
11	0272	0273	0274	0275	0276	0277	0278	0279	0280	0281	0282	0283	0284	0285	0286	0287
12	0288	0289	0290	0291	0292	0293	0294	0295	0296	0297	0298	0299	0300	0301	0302	0303
13	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	0316	0317	0318	0319
14	0320	0321	0322	0323	0324	0325	0326	0327	0328	0329	0330	0331	0332	0333	0334	0335
15	0336	0337	0338	0339	0340	0341	0342	0343	0344	0345	0346	0347	0348	0349	0350	0351
16	0352	0353	0354	0355	0356	0357	0358	0359	0360	0361	0362	0363	0364	0365	0366	0367
17	0368	0369	0370	0371	0372	0373	0374	0375	0376	0377	0378	0379	0380	0381	0382	0383
18	0384	0385	0386	0387	0388	0389	0390	0391	0392	0393	0394	0395	0396	0397	0398	0399
19	0400	0401	0402	0403	0404	0405	0406	0407	0408	0409	0410	0411	0412	0413	0414	0415
1A	0416	0417	0418	0419	0420	0421	0422	0423	0424	0425	0426	0427	0428	0429	0430	0431
1B	0432	0433	0434	0435	0436	0437	0438	0439	0440	0441	0442	0443	0444	0445	0446	0447
1C	0448	0449	0450	0451	0452	0453	0454	0455	0456	0457	0458	0459	0460	0461	0462	0463
1D	0464	0465	0466	0467	0468	0469	0470	0471	0472	0473	0474	0475	0476	0477	0478	0479
1E	0480	0481	0482	0483	0484	0485	0486	0487	0488	0489	0490	0491	0492	0493	0494	0495
1F	0496	0497	0498	0499	0500	0501	0502	0503	0504	0505	0506	0507	0508	0509	0510	0511
20	0512	0513	0514	0515	0516	0517	0518	0519	0520	0521	0522	0523	0524	0525	0526	0527
21	0528	0529	0530	0531	0532	0533	0534	0535	0536	0537	0538	0539	0540	0541	0542	0543
22	0544	0545	0546	0547	0548	0549	0550	0551	0552	0553	0554	0555	0556	0557	0558	0559
23	0560	0561	0562	0563	0564	0565	0566	0567	0568	0569	0570	0571	0572	0573	0574	0575
24	0576	0577	0578	0579	0580	0581	0582	0583	0584	0585	0586	0587	0588	0589	0590	0591
25	0592	0593	0594	0595	0596	0597	0598	0599	0600	0601	0602	0603	0604	0605	0606	0607
26	0608	0609	0610	0611	0612	0613	0614	0615	0616	0617	0618	0619	0620	0621	0622	0623
27	0624	0625	0626	0627	0628	0629	0630	0631	0632	0633	0634	0635	0636	0637	0638	0639
28	0640	0641	0642	0643	0644	0645	0646	0647	0648	0649	0650	0651	0652	0653	0654	0655
29	0656	0657	0658	0659	0660	0661	0662	0663	0664	0665	0666	0667	0668	0669	0670	0671
2A	0672	0673	0674	0675	0676	0677	0678	0679	0680	0681	0682	0683	0684	0685	0686	0687
2B	0688	0689	0690	0691	0692	0693	0694	0695	0696	0697	0698	0699	0700	0701	0702	0703
2C	0704	0705	0706	0707	0708	0709	0710	0711	0712	0713	0714	0715	0716	0717	0718	0719
2D	0720	0721	0722	0723	0724	0725	0726	0727	0728	0729	0730	0731	0732	0733	0734	0735
2E	0736	0737	0738	0739	0740	0741	0742	0743	0744	0745	0746	0747	0748	0749	0750	0751
2F	0752	0753	0754	0755	0756	0757	0758	0759	0760	0761	0762	0763	0764	0765	0766	0767
30	0768	0769	0770	0771	0772	0773	0774	0775	0776	0777	0778	0779	0780	0781	0782	0783
31	0784	0785	0786	0787	0788	0789	0790	0791	0792	0793	0794	0795	0796	0797	0798	0799
32	0800	0801	0802	0803	0804	0805	0806	0807	0808	0809	0810	0811	0812	0813	0814	0815
33	0816	0817	0818	0819	0820	0821	0822	0823	0824	0825	0826	0827	0828	0829	0830	0831
34	0832	0833	0834	0835	0836	0837	0838	0839	0840	0841	0842	0843	0844	0845	0846	0847
35	0848	0849	0850	0851	0852	0853	0854	0855	0856	0857	0858	0859	0860	0861	0862	0863
36	0864	0865	0866	0867	0868	0869	0870	0871	0872	0873	0874	0875	0876	0877	0878	0879
37	0880	0881	0882	0883	0884	0885	0886	0887	0888	0889	0890	0891	0892	0893	0894	0895
38	0896	0897	0898	0899	0900	0901	0902	0903	0904	0905	0906	0907	0908	0909	0910	0911
39	0912	0913	0914	0915	0916	0917	0918	0919	0920	0921	0922	0923	0924	0925	0926	0927
3A	0928	0929	0930	0931	0932	0933	0934	0935	0936	0937	0938	0939	0940	0941	0942	0943
3B	0944	0945	0946	0947	0948	0949	0950	0951	0952	0953	0954	0955	0956	0957	0958	0959
3C	0960	0961	0962	0963	0964	0965	0966	0967	0968	0969	0970	0971	0972	0973	0974	0975
3D	0976	0977	0978	0979	0980	0981	0982	0983	0984	0985	0986	0987	0988	0989	0990	0991
3E	0992	0993	0994	0995	0996	0997	0998	0999	1000	1001	1002	1003	1004	1005	1006	1007
3F	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
40	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039
41	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055
42	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071
43	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087
44	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103
45	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119
46	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135
47	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151
48	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167
49	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183
4A	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199
4B	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215
4C	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231
4D	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247
4E	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263
4F	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279
50	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295
51	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311
52	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327
53	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343
54	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359
55	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375
56	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391
57	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407
58	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423
59	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439
5A	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455
5B	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471
5C	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487
5D	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498	1499	1500	1501	1502	1503
5E	1504	1505	1506	1507	1508	1509	1510	1511	1512	1513	1514	1515	1516	1517	1518	1519
5F	1520	1521	1522	1523	1524	1525	1526	1527	1528	1529	1530	1531	1532	1533	1534	1535
60	1536	1537	1538	1539	1540	1541	1542	1543	1544	1545	1546	1547	1548	1549	1550	1551
61	1552	1553	1554	1555	1556	1557	1558	1559	1560	1561	1562	1563	1564	1565	1566	1567
62	1568	1569	1570	1571	1572	1573	1574	1575	1576	1577	1578	1579	1580	1581	1582	1583
63	1584	1585	1586	1587	1588	1589	1590	1591	1592	1593	1594	1595	1596	1597	1598	1599
64	1600	1601	1602	1603	1604	1605	1606	1607	1608	1609	1610	1611	1612	1613	1614	1615
65	1616	1617	1618	1619	1620	1621	1622	1623	1624	1625	1626	1627	1628	1629	1630	1631
66	1632	1633	1634	1635	1636	1637	1638	1639	1640	1641	1642	1643	1644	1645	1646	1647
67	1648	1649	1650	1651	1652	1653	1654	1655	1656	1657	1658	1659	1660	1661	1662	1663
68	1664	1665	1666	1667	1668	1669	1670	1671	1672	1673	1674	1675	1676	1677	1678	1679
69	1680	1681	1682	1683	1684	1685	1686	1687	1688	1689	1690	1691	1692	1693	1694	1695
70	1696	1697	1698	1699	1700	1701	1702	1703	1704	1705	1706	1707	1708	1709	1710	1711
71	1712	1713	1714	1715	1716	1717	1718	1719	1720	1721	1722	1723	1724	1725	1726	1727
72	1728	1729	1730	1731	1732	1733	1734	1735	1736	1737	1738	1739	1740	1741	1742	1743
73	1744	1745	1746	1747	1748	1749	1750	1751	1752	1753	1754	1755	1756	1757	1758	1759
74	1760	1761	1762	1763	1764	1765	1766	1767	1768	1769	1770	1771	1772	1773	1774	1775
75	1776	1777	1778	1779	1780	1781	1782	1783	1784	1785	1786	1787	1788	1789	1790	1791
76	1792	1793	1794	1795	1796	1797	1798	1799	1800	1801	1802	1803	1804	1805	1806	1807
77	1808	1809	1810	1811	1812	1813	1814	1815	1816	1817	1818	1819	1820	1821	1822	1823
78	1824	1825	1826	1827	1828	1829	1830	1831	1832	1833	1834	1835	1836	1837	1838	1839
79	1840	1841	1842	1843	1844	1845	1846	1847	1848	1849	1850	1851	1852	1853	1854	1855
7A	1856	1857	1858	1859	1860	1861	1862	1863	1864	1865	1866	1867	1868	1869	1870	1871
7B	1872	1873	1874	1875	1876	1877	1878	1879	1880	1881	1882	1883	1884	1885	1886	1887
7C	1888	1889	1890	1891	1892	1893	1894	1895	1896	1897	1898	1899	1900	1901	1902	1903
7D	1904	1905	1906	1907	1908	1909	1910	1911	1912	1913	1914	1915	1916	1917	1918	1919
7E	1920	1921	1922	1923	1924	1925	1926	1927	1928	1929	1930	1931	1932	1933	1934	1935
7F	1936	1937	1938	1939	1940	1941	1942	1943	1944	1945	1946	1947	1948	1949	1950	1951
7A	1952	1953	1954	1955	1956	1957	1958	1959	1960	1961	1962	1963	1964	1965	1966	1967
7B	1968	1969	1970	1971	1972	1973	1974	1975	1976	1977	1978	1979	1980	1981	1982	1983
7C	1984	1985	1986	1987	1988	1989	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999
7D	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015
7E	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031
7F	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
C0	3048	3049	3050	3051	3052	3053	3054	3055	3056	3057	3058	3059	3060	3061	3062	3063
C1	3064	3065	3066	3067	3068	3069	3070	3071	3072	3073	3074	3075	3076	3077	3078	3079
C2	3080	3081	3082	3083	3084	3085	3086	3087	3088	3089	3090	3091	3092	3093	3094	3095
C3	3096	3097	3098	3099	3100	3101	3102	3103	3104	3105	3106	3107	3108	3109	3110	3111
C4	3112	3113	3114	3115	3116	3117	3118	3119	3120	3121	3122	3123	3124	3125	3126	3127
C5	3128	3129	3130	3131	3132	3133	3134	3135	3136	3137	3138	3139	3140	3141	3142	3143
C6	3144	3145	3146	3147	3148	3149	3150	3151	3152	3153	3154	3155	3156	3157	3158	3159
C7	3160	3161	3162	3163	3164	3165	3166	3167	3168	3169	3170	3171	3172	3173	3174	3175
C8	3176	3177	3178	3179	3180	3181	3182	3183	3184	3185	3186	3187	3188	3189	3190	3191
C9	3192	3193	3194	3195	3196	3197	3198	3199	3200	3201	3202	3203	3204	3205	3206	3207
CA	3208	3209	3210	3211	3212	3213	3214	3215	3216	3217	3218	3219	3220	3221	3222	3223
CB	3224	3225	3226	3227	3228	3229	3230	3231	3232	3233	3234	3235	3236	3237	3238	3239
CC	3240	3241	3242	3243	3244	3245	3246	3247	3248	3249	3250	3251	3252	3253	3254	3255
CD	3256	3257	3258	3259	3260	3261	3262	3263	3264	3265	3266	3267	3268	3269	3270	3271
CE	3272	3273	3274	3275	3276	3277	3278	3279	3280	3281	3282	3283	3284	3285	3286	3287
CF	3288	3289	3290	3291	3292	3293	3294	3295	3296	3297	3298	3299	3300	3301	3302	3303
D0	3304	3305	3306	3307	3308	3309	3310	3311	3312	3313	3314	3315	3316	3317	3318	3319
D1	3320	3321	3322	3323	3324	3325	3326	3327	3328	3329	3330	3331	3332	3333	3334	3335
D2	3336	3337	3338	3339	3340	3341	3342	3343	3344	3345	3346	3347	3348	3349	3350	3351
D3	3352	3353	3354	3355	3356	3357	3358	3359	3360	3361	3362	3363	3364	3365	3366	3367
D4	3368	3369	3370	3371	3372	3373	3374	3375	3376	3377	3378	3379	3380	3381	3382	3383
D5	3384	3385	3386	3387	3388	3389	3390	3391	3392	3393	3394	3395	3396	3397	3398	3399
D6	3400	3401	3402	3403	3404	3405	3406	3407	3408	3409	3410	3411	3412	3413	3414	3415
D7	3416	3417	3418	3419	3420	3421	3422	3423	3424	3425	3426	3427	3428	3429	3430	3431
D8	3432	3433	3434	3435	3436	3437	3438	3439	3440	3441	3442	3443	3444	3445	3446	3447
D9	3448	3449	3450	3451	3452	3453	3454	3455	3456	3457	3458	3459	3460	3461	3462	3463
DA	3464	3465	3466	3467	3468	3469	3470	3471	3472	3473	3474	3475	3476	3477	3478	3479
DB	3480	3481	3482	3483	3484	3485	3486	3487	3488	3489	3490	3491	3492	3493	3494	3495
DC	3496	3497	3498	3499	3500	3501	3502	3503	3504	3505	3506	3507	3508	3509	3510	3511
DD	3512	3513	3514	3515	3516	3517	3518	3519	3520	3521	3522	3523	3524	3525	3526	3527
DE	3528	3529	3530	3531	3532	3533	3534	3535	3536	3537	3538	3539	3540	3541	3542	3543
DF	3544	3545	3546	3547	3548	3549	3550	3551	3552	3553	3554	3555	3556	3557	3558	3559
E0	3560	3561	3562	3563	3564	3565	3566	3567	3568	3569	3570	3571	3572	3573	3574	3575
E1	3576	3577	3578	3579	3580	3581	3582	3583	3584	3585	3586	3587	3588	3589	3590	3591
E2	3592	3593	3594	3595	3596	3597	3598	3599	3600	3601	3602	3603	3604	3605	3606	3607
E3	3608	3609	3610	3611	3612	3613	3614	3615	3616	3617	3618	3619	3620	3621	3622	3623
E4	3624	3625	3626	3627	3628	3629	3630	3631	3632	3633	3634	3635	3636	3637	3638	3639
E5	3640	3641	3642	3643	3644	3645	3646	3647	3648	3649	3650	3651	3652	3653	3654	3655
E6	3656	3657	3658	3659	3660	3661	3662	3663	3664	3665	3666	3667	3668	3669	3670	3671
E7	3672	3673	3674	3675	3676	3677	3678	3679	3680	3681	3682	3683	3684	3685	3686	3687
E8	3688	3689	3690	3691	3692	3693	3694	3695	3696	3697	3698	3699	3700	3701	3702	3703
E9	3704	3705	3706	3707	3708	3709	3710	3711	3712	3713	3714	3715	3716	3717	3718	3719
EA	3720	3721	3722	3723	3724	3725	3726	3727	3728	3729	3730	3731	3732	3733	3734	3735
EB	3736	3737	3738	3739	3740	3741	3742	3743	3744	3745	3746	3747	3748	3749	3750	3751
EC	3752	3753	3754	3755	3756	3757	3758	3759	3760	3761	3762	3763	3764	3765	3766	3767
ED	3768	3769	3770	3771	3772	3773	3774	3775	3776	3777	3778	3779	3780	3781	3782	3783
EE	3784	3785	3786	3787	3788	3789	3790	3791	3792	3793	3794	3795	3796	3797	3798	3799
EF	3800	3801	3802	3803	3804	3805	3806	3807	3808	3809	3810	3811	3812	3813	3814	3815
F0	3816	3817	3818	3819	3820	3821	3822	3823	3824	3825	3826	3827	3828	3829	3830	3831
F1	3832	3833	3834	3835	3836	3837	3838	3839	3840	3841	3842	3843	3844	3845	3846	3847
F2	3848	3849	3850	3851	3852	3853	3854	3855	3856	3857	3858	3859	3860	3861	3862	3863
F3	3864	3865	3866	3867	3868	3869	3870	3871	3872	3873	3874	3875	3876	3877	3878	3879
F4	3880	3881	3882	3883	3884	3885	3886	3887	3888	3889	3890	3891	3892	3893	3894	3895
F5	3896	3897	3898	3899	3900	3901	3902	3903	3904	3905	3906	3907	3908	3909	3910	3911
F6	3912	3913	3914	3915	3916	3917	3918	3919	3920	3921	3922	3923	3924	3925	3926	3927
F7	3928	3929	3930	3931	3932	3933	3934	3935	3936	3937	3938	3939	3940	3941	3942	3943
F8	3944	3945	3946	3947	3948	3949	3950	3951	3952	3953	3954	3955	3956	3957	3958	3959
F9	3960	3961	3962	3963	3964	3965	3966	3967	3968	3969	3970	3971	3972	3973	3974	3975
FA	3976	3977	3978	3979	3980	3981	3982	3983	3984	3985	3986	3987	3988	3989	3990	3991
FB	3992	3993	3994	3995	3996	3997	3998	3999	4000	4001	4002	4003	4004	4005	4006	4007
FC	4008	4009	4010	4011	4012	4013	4014	4015	4016	4017	4018	4019	4020	4021	4022	4023
FD	4024	4025	4026	4027	4028	4029	4030	4031	4032	4033	4034	4035	4036	4037	4038	4039
FE	4040	4041	4042	4043	4044	4045	4046	4047	4048	4049	4050	4051	4052	4053	4054	4055
FF	4056	4057	4058	4059	4060	4061	4062	4063	4064	4065	4066	4067	4068	4069	4070	4071
FF	4072	4073	4074	4075	4076	4077	4078	4079	4080	4081	4082	4083	4084	4085	4086	4087

extended chart to the right.

For conversion of decimal values beyond the main table, deduct the largest number in the table at the right that will yield a positive result. The related digit is the high-order hexadecimal digit. Determine the three remaining hexadecimal digits by converting the product of the above subtraction in the main table.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
80	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063
81	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079
82	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095
83	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111
84	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127
85	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143
86	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159
87	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175
88	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191
89	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207
8A	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223
8B	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239
8C	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255
8D	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271
8E	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287
8F	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303
90	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319
91	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335
92	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351
93	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367
94	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383
95	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398	2399
96	2400	2401	2402	2403	2404	2405	2406	2407	2408	2409	2410	2411	2412	2413	2414	2415
97	2416	2417	2418	2419	2420	2421	2422	2423	2424	2425	2426	2427	2428	2429	2430	2431
98	2432	2433	2434	2435	2436	2437	2438	2439	2440	2441	2442	2443	2444	2445	2446	2447
99	2448	2449	2450	2451	2452	2453	2454	2455	2456	2457	2458	2459	2460	2461	2462	2463
9A	2464	2465	2466	2467	2468	2469	2470	2471	2472	2473	2474	2475	2476	2477	2478	2479
9B	2480	2481	2482	2483	2484	2485	2486	2487	2488	2489	2490	2491	2492	2493	2494	2495
9C	2496	2497	2498	2499	2500	2501	2502	2503	2504	2505	2506	2507	2508	2509	2510	2511
9D	2512	2513	2514	2515	2516	2517	2518	2519	2520	2521	2522	2523	2524	2525	2526	2527
9E	2528	2529	2530	2531	2532	2533	2534	2535	2536	2537	2538	2539	2540	2541	2542	2543
9F	2544	2545	2546	2547	2548	2549	2550	2551	2552	2553	2554	2555	2556	2557	2558	2559
00	2560	2561	2562	2563	2564	2565	2566	2567	2568	2569	2570	2571	2572	2573	2574	2575
A0	2576	2577	2578	2579	2580	2581	2582	2583	2584	2585	2586	2587	2588	2589	2590	2591
A1	2592	2593	2594	2595	2596	2597	2598	2599	2600	2601	2602	2603	2604	2605	2606	2607
A2	2608	2609	2610	2611	2612	2613	2614	2615	2616	2617	2618	2619	2620	2621	2622	2623
A3	2624	2625	2626	2627	2628	2629	2630	2631	2632	2633	2634	2635	2636	2637	2638	2639
A4	2640	2641	2642	2643	2644	2645	2646	2647	2648	2649	2650	2651	2652	2653	2654	2655
A5	2656	2657	2658	2659	2660	2661	2662	2663	2664	2665	2666	2667	2668	2669	2670	2671
A6	2672	2673	2674	2675	2676	2677	2678	2679	2680	2681	2682	2683	2684	2685	2686	2687
A7	2688	2689	2690	2691	2692	2693	2694	2695	2696	2697	2698	2699	2700	2701	2702	2703
A8	2704	2705	2706	2707	2708	2709	2710	2711	2712	2713	2714	2715	2716	2717	2718	2719
AA	2720	2721	2722	2723	2724	2725	2726	2727	2728	2729	2730	2731	2732	2733	2734	2735
AA	2736	2737	2738	2739	2740	2741	2742	2743	2744	2745	2746	2747	2748	2749	2750	2751
AB	2752	2753	2754	2755	2756	2757	2758	2759	2760	2761	2762	2763	2764	2765	2766	2767
AC	2768	2769	2770	2771	2772	2773	2774	2775	2776	2777	2778	2779	2780	2781	2782	2783
AD	2784	2785	2786	2787	2788	2789	2790	2791	2792	2793	2794	2795	2796	2797	2798	2799
AE	2800	2801	2802	2803	2804	2805	2806	2807	2808	2809	2810	2811	2812	2813	2814	2815
AF	2816	2817	2818	2819	2820	2821	2822	2823	2824	2825	2826	2827	2828	2829	2830	2831
BF	2832	2833	2834	2835	2836	2837	2838	2839	2840	2841	2842	2843	2844	2845	2846	2847
B0	2848	2849	2850	2851	2852	2853	2854	2855	2856	2857	2858	2859	2860	2861	2862	2863
B1	2864	2865	2866	2867	2868	2869	2870	2871	2872	2873	2874	2875	2876	2877	2878	2879
B2	2880	2881	2882	2883	2884	2885	2886	2887	2888	2889	2890	2891	2892	2893	2894	2895
B3	2896	2897	2898	2899	2900	2901	2902	2903	2904	2905	2906	2907	2908	2909	2910	2911
B4	2912	2913	2914	2915	2916	2917	2918	2919	2920	2921	2922	2923	2924	2925	2926	2927
B5	2928	2929	2930	2931	2932	2933	2934	2935	2936	2937	2938	2939	2940	2941	2942	2943
B6	2944	2945	2946	2947	2948	2949	2950	2951	2952	2953	2954	2955	2956	2957	2958	2959
B7	2960	2961	2962	2963	2964	2965	2966	2967	2968	2969	2970	2971	2972	2973	2974	2975
B8	2976	2977	2978	2979	2980	2981	2982	2983	2984	2985	2986	2987	2988	2989	2990	2991
B9	2992	2993	2994	2995	2996	2997	2998	2999	3000	3001	3002	3003	3004	3005	3006	3007
BC	3008	3009	3010	3011	3012	3013	3014	3015	3016	3017	3018	3019	3020	3021	3022	3023
BD	3024	3025	3026	3027	3028	3029	3030	3031	3032	3033	3034	3035	3036	3037	3038	3039
BE	3040	3041	3042	3043	3044	3045	3046	3047	3048	3049	3050	3051	3052	3053	3054	3055
BF	3056	3057	3058	3059	3060	3061	3062	3063	3064	3065	3066	3067	3068	3069	3070	3071

## APPENDIX C: ASSEMBLER MNEMONICS AND ERROR CODES FOR 2250 ORDERS

This appendix provides information about the 2250 orders: their names, mnemonics, and the corresponding 2250 model 4 orders; coding formats; and notes pertaining to using the orders. The information about each order is presented as follows:

### Assembler Order (2250 Order)

Coding format and Assembler mnemonic
--------------------------------------

**Notes:** Operand limitations, restrictions, significance of format and tag fields, etc.

Functional descriptions of the 2250, model 4 orders are contained in the publication IBM 1130 Component Description: IBM 2250 Display Unit Model 4, Form A27-2723. This appendix is to be used in conjunction with that publication.

Table 2 lists the codes used to identify errors encountered during assembly of the orders, the causes of the errors, and the actions taken by the Assembler.

### Set Graphic Mode Vector (Set Graphic Mode)

21	27
[label]	SGMV

**Notes:** The graphic mode vector must be established before generating lines. Vector mode is set automatically if no graphic mode has been previously set (see the 2250 model 4 Component Description publication).

### Set Graphic Mode Point (Set Graphic Mode)

21	27
[label]	SGMP

**Notes:** The graphic mode point must be established before generating points.

### Set Character Mode Basic (Set Character Mode)

21	27
[label]	SCMB

**Notes:** A character mode must be established before executing a character stroke or entering a character stroke subroutine.

### Set Character Mode Large (Set Character Mode)


21	27
[label]	SCML

**Notes:** The notes for SCMB also apply for SCML.

### Set Pen Mode (Set Pen Mode)

21	27	35
[label]	SPM	/hex digit or equivalent

**Notes:** The operand may be any hex digit or any valid absolute Assembler expression in the range 0 to F. The bit pattern of a hex digit and the effect of a 1 in a bit position are as follows:

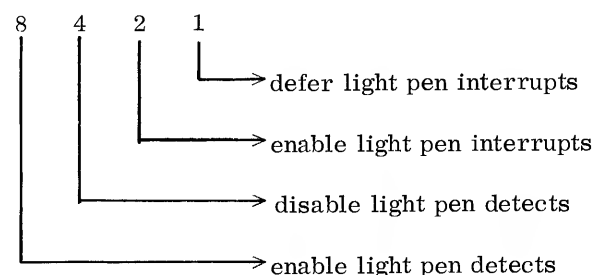

For example, /9 (1001) defers interrupts and enables detects. Hex values 0, 3, C, and F result in no-operation.

### Start Regeneration Timer (Start Timer)

21	27
[label]	STMR

**Notes:** The STMR order should be the first order in an order program. Its use is required for accepting keyboard attentions and setting the status of the light pen switch.

### Store Revert Register (Store Revert Register)

21	27
[label]	SRVT

**Notes:** The SRVT order is used for return linkage when multiple levels of subroutines are used. A graphic branch indirect through the second word of the SRVT order returns control to the calling program. The SRVT order should appear in the subroutine preceding any graphic branch orders within the subroutine.

### Revert (Revert)

21	27
[label]	RVT

**Notes:** If an order subroutine does not contain any graphic branch orders, the RVT order can be used to return control to the main order program at the order following the branch to the subroutine. If the subroutine is two or more levels from the main order program, the RVT order does not pass control to the main order program.

### Graphic No-operation (Set Pen Mode)

21	27
[label]	GNOP

**Notes:** GNOP is assembled as an SPM order with an operand of hexadecimal 00. It can be used to reserve a single word in an order stream for later modification.

### Move\* Beam Incremental (Incremental XY)

21	27	35
[label]	MBI	X, Y

**Notes:** The x- and y-coordinates may be any valid absolute Assembler expressions, but must be in the range +63 to -64.

\*The word "move" here and in the following orders relates to blanked beam movement.

### Draw\* Beam Incremental (Incremental XY)

21	27	35
[label]	DBI	X, Y

**Notes:** In vector mode, beam movement is unblanked; in point mode, only the end point is unblanked. The notes for MBI also apply.

\*The word "draw" here and in following orders relates to unblanked beam movement.

### Move Beam Absolute (Absolute XY)

21	27	35
[label]	MBA	X, Y

**Notes:** The x- and y-coordinates may be any valid absolute Assembler expressions, but must be in the range 0 to 1023.

### Draw Beam Absolute (Absolute XY)

21	27	35
[label]	DBA	X, Y

**Notes:** In vector mode, beam movement is unblanked; in point mode, only the end point is unblanked. The notes for MBA also apply.

### Move Beam Absolute X (Absolute X/Y)

21	27	35
[label]	MBAX	X

**Notes:** The operand may be any valid absolute Assembler expression, but must be in the range 0 to 1023.

### Move Beam Absolute Y (Absolute X/Y)

21	27	35
[label]	MBAY	Y

**Notes:** The notes for MBAX also apply here.

### Draw Beam Absolute X (Absolute X/Y)

21	27	35
[label]	DBAX	X

**Notes:** In vector mode, beam movement is unblanked; in point mode, only the end point is unblanked. The notes for MBAX also apply.

### Draw Beam Absolute Y (Absolute X/Y)

21	27	35
[label]	DBAY	Y

**Notes:** In vector mode, beam movement is unblanked; in point mode, only the end point is unblanked. The notes for MBAX also apply.

### Move Beam Stroke (Character Stroke Word)

21	27	32	35
[label]	MBS	[R]	X, Y

**Notes:** The x- and y-coordinates may be any valid absolute Assembler expressions, but X must be in

the range 0 to 6, and Y must be in the range 0 to 7. The x- and y-coordinates occupy a half-word. For consecutive orders, the coordinates for two orders are placed in one word. The revert function is executed if an R is placed in column 32. Character stroke orders must be executed out of line by means of a graphic branch following a set character mode order.

### Draw Beam Stroke (Character Stroke Word)

21	27	32	33	35
[label]	DBS	[R]	[D]	X, Y

**Notes:** A D in column 33 indicates that less than normal (decreased) intensity is desired (recommended for character strokes less than 2 character units long; see the 2250 model 4 Component Description publication for details about character units). Programmed intensity provides a means of generating characters that have nearly uniform intensity for all the strokes of the character regardless of the stroke lengths. The programmer should experiment with this facility to achieve desired results. The notes for MBS also apply.

### Control Stroke (Character Stroke Word)

21	27	32	35
[label]	CS	[R]	1, [data]
[label]	CS		2, [data]
[label]	CS	R	2, [data]
[label]	CS	[R]	4, [data]
[label]	CS	R	7, [data]

**Notes:** The first operand, which may be any valid absolute Assembler expression, has the following meanings:

- |                    |   |
|--------------------|---|
| 1 = subscripting   | - the character grid is offset downward 3 vertical character units. |
| 2 = no operation   | - the order performs no operation if R is not specified.            |
| 2 = null function  | - the order performs a null function if R is specified.             |
| 4 = superscripting | - the character grid is offset upward 3 vertical character units.   |
| 7 = new line       | - the beam is positioned at the next line (R must be specified).    |



The "data" operand may be any data the programmer wants, but must not exceed 7 bits. Data exceeding the limit is truncated to the 7 low-order bits.

If revert (R) is not specified for the superscript control order, execution continues with the second word after the superscript control order. Placing a subscript control after the superscript control order gives a character stroke subroutine the capability of being executed in superscript, subscript, or normal mode if different entry points to the subroutine are defined.

#### Graphic Short Branch (Short Branch)

21	27	35
[label]	GSB	address

**Notes:** The address may be either symbolic or an absolute Assembler expression, but must have a value less than 8192. Use of the symbolic operand is restricted to referring to graphic orders that are within the same Assembler-language program.

#### Graphic Branch (Long Branch/Interrupt)

21	27	32	33	35
[label]	GB	[I]	[N]	address

**Notes:** An I in column 32 specifies an indirect branch. An N in column 33 specifies a two-word no-operation. The notes for GSB also apply, except that the address is not restricted to a value of less than 8192.

#### Graphic Branch Conditional (Long Branch/Interrupt)

21	27	32	33	35
[label]	GBC	[I]	[N]	address, condition

**Notes:** The condition for the branch may be one of the following:

- D = branch if light pen detect
- S = branch if light pen switch closed
- DS or SD = branch if light pen detect and switch closed

The notes for GB also apply.

#### Graphic Branch External (Long Branch/Interrupt)

21	27	33	35
[label]	GBE	[N]	name

**Notes:** Name is the name of an external order program (subroutine). An N in column 33 specifies a two-word no operation.

#### Graphic Branch Conditional External (Long Branch/Interrupt)

21	27	33	35
[label]	GBCE	[N]	name, condition

**Notes:** The conditions for the branch are the same as those described for GBC. The notes for GBE also apply.

#### Graphic Interrupt (Long Branch/Interrupt)

21	27	33	35
[label]	GI	[N]	[data]

**Notes:** An N in column 33 specifies a two-word no-operation. Data may be a symbolic address, number, or expression. The range of numerical data or an expression, when resolved, must be +32767 to -32768. The data word may be used for any purpose.

#### Graphic Interrupt Conditional (Long Branch/Interrupt)

21	27	33	35
[label]	GIC	[N]	[data], condition

**Notes:** The condition for the interrupt may be one of the following:

- D = interrupt if light pen detect
- S = interrupt if light pen switch closed
- DS or SD = interrupt if light pen detect and switch closed

The notes for GI also apply.

Table 2. Assembler Error Codes for 2250 Errors

Error Code	Cause	Action Taken by Assembler
W	x- or y-coordinate, or both, not within the specified range; or invalid operand	Operand set to zero.
X	Character other than R or I in column 32; or character other than D or N in column 33.	Field set to zero.
Y	Unnecessary operand specified; or unnecessary Tag or Format field entry.	Operand ignored; Tag or Format field ignored.
Z	Invalid condition in a conditional branch or or interrupt order.	Condition bits in first word set to zero.

## INDEX

- ABS Statement 17
- Absolute Assembly 18
- Absolute Expressions 10
- Arithmetic Instructions 14
- Assemble Absolute Statement 17
- Assembler Features 1
- Assembler Instructions 17, 26
  - ABS - Assemble Absolute 17
  - BES - Block Ended by Symbol 22
  - BSS - Block Started by Symbol 22
  - CALL - Call Subroutine 24
  - DC - Define Constant 19
  - DEC - Decimal Data 19
  - EBC - Extended BCD Information 21
  - END - End of Source Program 19
  - ENT - Define Subroutine Entry Point 23
  - EQU - Equate Symbol 22
  - ORG - Define Origin 18
  - XFLC - Extended Floating Constant 21
- Assembler Program 1
- Asterisk as an Element 9
- Asterisk as an Operator 10
- Asterisk in Column 21 3
- Automatic Storage Assignment 2
  
- BES Statement 22
- Binary-Point Identifier 20
- Blank Format 4
- Block Ended by Symbol Statement 22
- Block Started by Symbol Statement 22
- Branch Instructions 14, 16
- BSC Equivalents (Monitor) 15
- BSS Statement 22
  
- CALL Statement 24
- Character Code Chart 34
- Character Codes 33
- Character Set 7, 34
- Character Values 9
- Coding Form 4
- Comments Field 6
- Condition Testing Instructions 13
- Console Printer Hex Code 33
  
- Data Definition Statements 19, 28
- Data Representation 2
- DC Statement 19
- DEC Statement 19
- Decimal Data Items 19
- Disk Data Organization Statements 26
- Decimal Data Statement 19
- Decimal/Hexadecimal Conversion Chart 38
- Decimal Integers 20
- Define Constant Statement 19
- Define Disk File (Monitor) 27
- Define Interrupt Level Subroutine Statement 24
- Define Interrupt Service Entry Point Statement 23
- Define Message (Monitor) 28
- Define Name Statement (Monitor) 29
- Define Origin Statement 18
- Define Sector Address Statement (Monitor) 26
- Define Subroutine Entry Point Statement 23
- Displacement 4, 5
- DMES Statement (Monitor) 23
- DN Statement (Monitor) 29
- DSA Statement (Monitor) 26
- Dump and Continue Execution (Monitor) 31
- Dump and Terminate Execution (Monitor) 30
- DUMP Statement (Monitor) 30
  
- EBC Statement 21
- EBCDIC Code 33
- Effective Address 4
- EJCT Statement (Monitor) 32
- Elements 9
- End of Source Program Statement 19
- END Statement 19
- ENT Statement 23
- EPR-Extended Precision 18
- EQU Statement 22
- Equate Symbol Statement 22
- Error Checking 2
- EXIT Statement (Monitor) 30
- Exponent 20
- Expressions 9
- Extended Binary Coded Information Statement 21
- Extended Binary Coded Decimal Interchange Code 33
- Extended Real Constant Statement 21
  
- Features of the Assembler 1
- Fields
  - Comments 6
  - Format 4
  - Identification-Sequence 7
  - Index Register 6
  - Label 3
  - Operand 6
  - Operation 3
  - Remarks 6
  - Tag 6
- FILE Statement (Monitor) 27
- Fixed Point Numbers 20
- Format Field 4
- Format of Assembler Statements 3
- Graphic Orders 39, 1
  
- HDNG Statement (Monitor) 31
- Heading Statement (Monitor) 31
- Hexadecimal/Decimal Conversion Chart 38

Hexadecimal Notation	33	ORG Statement	18
Hexadecimal Values	9	Overflow, Location Assignment Counter	7
I Format	5	Paper Tape Transmission Code	33
IAR	4	PDMP Statement (Monitor)	31
IBM Card Code	33	Program Control Statements	17
Identification Field	7	Program-Linking Statements	23, 30
ILS Statement	24	Program Listings	2
Index Registers, Specifying	6	Programming Considerations for DSA Statement	27
Index Registers	6, 25	PTTC/8	33
Index Register Field	6	Real Numbers	20
Indirect Addressing	6	Relative Addressing	8
Input/Output Instructions	14	Relocatable Assembly	17
Instruction Address Register	4	Relocatable Expressions	10
ISS Number	23	Relocatable Programs	17
ISS Statement	23	Remarks Field	6
L Format	5	Renaming Symbols	2
Label Field	3	Return to Supervisor (Monitor)	30
LIBF - Call TV Reference Subroutine	25	Self-Defining Values	
LIBF Subroutine Transfer Vector	25	Decimal	9
LIBR - Transfer Vector Subroutine	18	Hexadecimal	9
LINK Statement (Monitor)	30	Character	9
Linking Statements	23, 30	Sequence Field	7
LIST Statement (Monitor)	31	Shift Instructions	14, 16
List Control Statements (Monitor)	31	Slash (/), Use of	9
List Segments of Program (Monitor)	31	Source Program	3
Location Assignment Counter	7	SPAC Statement (Monitor)	32
Location Assignment Counter Overflow	8	Space Listing (Monitor)	32
Load Instructions	14	SPR-Standard Precision	18
Load Link Program (Monitor)	30	Start New Page (Monitor)	32
Machine-Instruction Statements	13	Statement Field	3
Machine-Instruction Mnemonics	13	Statement Writing	7
Mantissa	20	Storage Allocation Statements	22
Miscellaneous Instructions	14	Store Instructions	14
Mnemonics	13, 15	Subroutine Transfer Vector	25
Mnemonic Concept	3	Subroutines	1
Mnemonic Operation Codes	1	Symbol Definition Statement	22
Modify Memory (Monitor Mnemonic)	15	Symbol Table	7
Monitor Assembler Statements		Symbolic Language	1, 3
DMES - Define Message	28	Symbolic Reference to Storage Addresses	2
DN - Define Name	29	Symbols	7
DSA - Define Sector Address	26	Symbols, Restrictions	7
DUMP - Dump and Terminate Execution	30	Tag Field	6
EJCT - Start New Page	32	Terms	10
EXIT - Return to Supervisor	30	Transfer Vector (LIBF)	25
FILE - Define Disk File	27	Types of Expressions	10
HDNG - Heading	31	Writing	
LINK - Load Link Program	30	Statements	7
LIST - List Segments of Program	31	Subroutines	23
PDMP - Dump and Continue Execution	31	X Format	5
SPAC - Space Listing	32	XFLC Statement	21
Name Code	29	1132 Printer EBCDIC Subset Hex Code	33
Operand Field	6	1403 Printer Hex Code	33
Operators	10	2250 Display Unit, Model 4	39.1
Operation Field	3		

# IBM Technical Newsletter

File Number	1130-21
Re: Form No.	C26-5927-4
This Newsletter No.	N33-8015
Date	June 5, 1968
Previous Newsletter Nos.	None

## IBM 1130 Assembler Language

This Technical Newsletter provides replacement pages for IBM 1130 Assembler Language, Form No. C26-5927-4. Pages to be inserted and/or removed are listed below.

### Remove Pages

iii, iv  
17, 18  
23-26

29-32  
39-42

### Insert Pages

iii, iv  
17, 18  
23, 24  
25, 25.1  
25.2, 26  
29-32  
39  
39.1, 39.2  
39.3, 39.4  
39.5, 40  
41, 42

A change to the text or a small change to an illustration is indicated by a vertical line to the left of the change; a changed or added illustration is noted by the symbol \* to the left of the caption. Completely new or substantially changed pages are indicated by the symbol \* to the left of the page number.

## Summary of Amendments

This TNL supplies the following amendments to the manual:

- + New information on the 2250 Display Unit, Model 4, ISS (DSPYN).
- + Revision of the discussion on CALL and LIBF statements.
- + Various corrections to previous information in the manual.

File this cover letter at the back of the manual to provide a record of changes.

*IBM Nordic Laboratory, Technical Communications, Box 962, Lidingö 9, Sweden*

## READER'S COMMENT FORM

IBM 1130 Assembler Language

Form C26-5927-4

- Your comments, accompanied by answers to the following questions, help us produce better publications for your use. If your answer to a question is "No" or requires qualification, please explain in the space provided below. Comments and suggestions become the property of IBM.

- |  | Yes   | No                       |
|--|---|--------------------------|
| • Does this publication meet your needs?   | <input type="checkbox"/>                              | <input type="checkbox"/> |
| • Did you find the material:   |   |                          |
| Easy to read and understand?   | <input type="checkbox"/>                              | <input type="checkbox"/> |
| Organized for convenient use?  | <input type="checkbox"/>                              | <input type="checkbox"/> |
| Complete?  | <input type="checkbox"/>                              | <input type="checkbox"/> |
| Well illustrated?  | <input type="checkbox"/>                              | <input type="checkbox"/> |
| Written for your technical level?  | <input type="checkbox"/>                              | <input type="checkbox"/> |
| • What is your occupation? _____   |   |                          |
| • How do you use this publication?   |   |                          |
| As an introduction to the subject? <input type="checkbox"/>                          | As an instructor in a class? <input type="checkbox"/> |                          |
| For advanced knowledge of the subject? <input type="checkbox"/>                      | As a student in a class? <input type="checkbox"/>     |                          |
| For information about operating procedures? <input type="checkbox"/>                 | As a reference manual? <input type="checkbox"/>       |                          |
| Other _____  |   |                          |
| • Please give specific page and line references with your comments when appropriate. |   |                          |

### COMMENTS

- Thank you for your cooperation. No postage necessary if mailed in the U.S.A.

**YOUR COMMENTS PLEASE . . .**

This SRL bulletin is one of a series which serves as reference sources for systems analysts, programmers and operators of IBM systems. Your answers to the questions on the back of this form, together with your comments, will help us produce better publications for your use. Each reply will be carefully reviewed by the persons responsible for writing and publishing this material. All comments and suggestions become the property of IBM.

Please note: Requests for copies of publications and for assistance in utilizing your IBM system should be directed to your IBM representative or to the IBM sales office serving your locality.

Fold

Fold

FIRST CLASS  
PERMIT NO. 1359  
WHITE PLAINS, N. Y.

**BUSINESS REPLY MAIL**  
NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES

POSTAGE WILL BE PAID BY . . .

IBM Corporation  
112 East Post Road  
White Plains, N. Y. 10601

Attention: Department 813

Fold

Fold

**IBM**

International Business Machines Corporation  
Data Processing Division  
112 East Post Road, White Plains, N. Y. 10601  
(USA Only)

IBM World Trade Corporation  
821 United Nations Plaza, New York, New York 10017  
(International)